

1. UNPACK

Unpack the Cocoon Ultra HD Android Media Player from the packaging and check you have all the components:

- 1 X Ultra HD Android Media Player
- 1 X Power Adaptor
- 1 X RCA Cable
- 1 X Remote Control

- 1 X Manual
- · 1 X Getting Started Guide
- 1 X Warranty Card



2. CONNECT TO YOUR TV

Using an HDMI cable (not included), connect the Android Media Player to your TV. Connect the HDMI cable to the port marked 'HDMI' on the rear of the Android Media Player and to the HDMI input on your TV. Ensure your TV is set to display the correct HDMI input, for example HDMI1.



3. CONNECT TO POWER

Connect the power adaptor to a power outlet then connect the cord to the rear of the Android Media Player in the port marked 'DC 5V'. Turn the power adaptor on at the socket. Once connected, the Android Media Player will automatically begin booting up (ensure your TV is turned on).

4. REMOTE CONTROL

Insert 2 AAA batteries (Not included) into the remote control by removing the battery cover on the rear of the remote. Insert the batteries, taking note of the polarity markings.

5. CONNECT A USB DRIVE OR MICRO SD CARD

Connect a USB memory stick with your movie file that you wish to play to either of the ports marked 'USB'. You can also insert a MicroSD card into the slot marked 'Micro SD'.



6. HOME SCREEN

Navigate to KODI by selecting the KODI icon from the home screen. You can navigate using the directional buttons on the remote control and select the 'Home' option by pressing OK, then navigate and select "KODI" to launch the app.



7. KODI HOME SCREEN

Navigate to 'VIDEOS', then select 'USB' or 'SD card' to select your USB Drive or Micro SD Card. Use the remote to navigate to the movie file you wish to play. Once you highlight the file, press 'OK' on the remote to begin playback.



8. SUCCESS

You have successfully set up your Ultra HD Android Media Player. For further information refer to the included user manual or visit www.winplus.com.au/ for advanced guides and information.