

COCOON™
DJ Speaker
with Party Lights



Model Number: HE160821

INSTRUCTION MANUAL



Important

Getting the most out of your DJ Speakers:



Read the manual carefully

It will help you get set up with ease



Visit www.winplus.com.au

We've got support guides available to download



Call After Sales Support - 1300 663 907

Available Monday - Friday, 8:30am - 6:00pm AEST



Email customercare@winplus.com.au

We're always happy to help

Warranty Note

If you experience any issues with this product, or it's performance is not what you had expected, please contact us at Winplus before returning the item to the store.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm EST)

Email: customercare@winplus.com.au

Web: www.winplus.com.au

COCOON™


DJ Speaker with Party Lights

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 663 907

 customercare@winplus.com.au

MODEL: HE160821 PRODUCT CODE: 53111 02/2016



Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and packaging. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures
- There are no user-serviceable parts inside this product
- Do not repair the unit yourself. If your device is not functioning correctly, disconnect the product from power, remove batteries, and contact after sales support
- Supervise young children to ensure they do not play with the product
- Do not expose to water, dust, moisture, chemicals, oils or other liquids
- Do not expose to naked flames or other heat sources
- Do not drop or subject the device to undue shock
- Keep device away from magnets at all times
- Keep away from direct sunlight
- Unplug this device during lightning storms or when unused for long periods of time

After Sales Support

 1300 663 907



customercare@winplus.com.au

Model Number HE160821

Contents

Warranty Details	3
Safety Instructions	4
Parts List	6
Technical Specifications	6
Product Overview	7
Front View	7
Microphone	7
Rear View	7
Control Panel	8
Remote	9
Installation	10
Powering your DJ Speaker	11
Mains Power	11
Recharging the Battery	11
Using the Rechargeable Battery	11
Aux Mode	11
Operation	11
FM Mode	12
Bluetooth Mode	12
Pairing your DJ Speaker with a New Device	12
Pairing your DJ Speaker Device with an Existing Device	12
MP3 Playback Mode	13
Using the Party Lights	14
Using the Wireless Microphone	14
Using the Trolley Handle	14
Repair and Refurbished Goods or Parts Notice	15



Parts List

- 1 x Cocoon DJ Speaker with Party Lights
- 1 x Remote Control
- 1 x Wireless Microphone
- 1 x 3.5mm Aux Cable
- 1 x Power Cable
- 2 x Activ Energy AA Batteries
- 2 x Activ Energy AAA Batteries
- 1 x Warranty Certificate
- 1 x Instruction Manual
- 1 x Getting Started Guide



Technical Specifications

Input Rating:	240V, 50Hz AC
Speaker Output Power:	35 Watts
Impedance:	4 Ohm
Frequency Range:	20 Hz – 20 KHz
Speakers:	8" Woofer & 2 x 2" Tweeters
Rechargeable Battery:	12V, 2.6Ah
Supported Formats:	MP3
Power Cable Length:	2 Metres
Aux Cable Length:	1 Metre
Microphone Distance:	Up to 20 Metres
Bluetooth Distance:	Up to 10 Metres
Features:	Bluetooth (Version 2.1) Wireless Microphone (261.8MHz) USB and MicroSD for MP3 Playback IR Remote

After Sales Support

 1300 663 907

 customercare@winplus.com.au

 
Model Number HE160821

Product Overview

Front View



Rear View

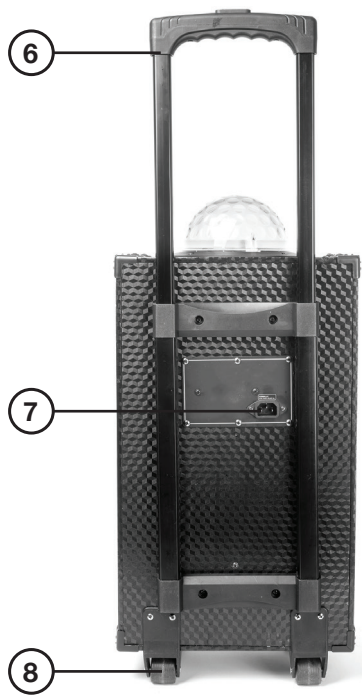

- 1. Party Lights
- 2. Control Panel
- 3. Strobe Light
- 4. 2" Tweeter Speakers

- 5. 8" Woofer Speaker
- 6. Extendable Trolley Arm
- 7. Power Input Port
- 8. Castor Wheels


Microphone



- 1. Battery Indicator
A solid red LED will indicate when batteries are low

- 2. Mode Slider
Select between ON, MUTE or OFF mode

After Sales Support

 
 1300 663 907

 customercare@winplus.com.au

Model Number HE160821

Product Overview

Control Panel

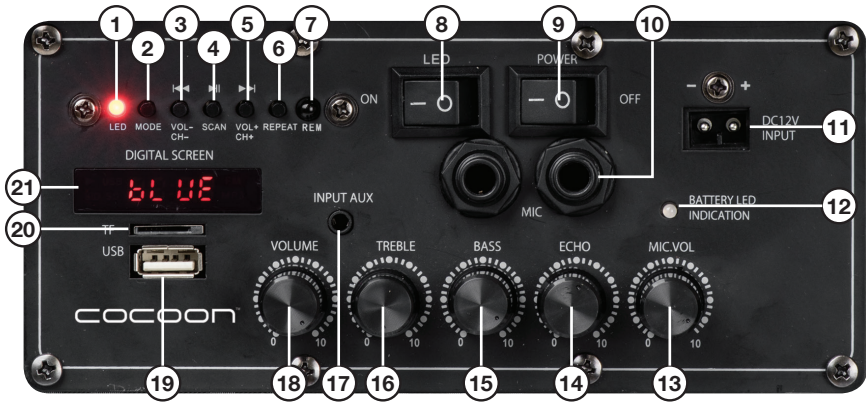

1. **Power LED:** Illuminates when DJ Speakers are powered on
2. **MODE Button:** Change between AUX, FM and Bluetooth modes
3. **PREV Button:** Navigate to the previous track or FM station
4. **PLAY Button:** Play/Pause the current track, or use to scan for available FM stations
5. **NEXT Button:** Navigate to the next track or FM station.
6. **REPEAT Button:** Repeat a single MP3 file (ONE) or play through all MP3 files (ALL)
7. **REM:** Infrared sensor for the remote
8. **LED Switch:** Turn on the Party Lights for the ultimate entertainment experience!
9. **POWER Switch:** Turn on the DJ Speaker system
10. **Mic Input Port (x2):** Connect a wired microphone using this 6.5mm audio port
11. **DC 12V Input Port:** 12V DC input terminal for connecting to an external battery
12. **Battery LED Indicator:** Indicates if battery is charging (RED) or fully charged (GREEN)
13. **MIC VOL Dial:** Control the microphone volume level
14. **ECHO Dial:** Control the sound of the microphone echo
15. **BASS Dial:** Control the sound of the bass
16. **TREBLE Dial:** Control the sound of the treble
17. **Input Aux Port:** Connect your audio device using the included Aux Cable
18. **VOLUME Dial:** Control the audio output volume of the current playback mode
19. **USB Port:** Input a USB (FAT32 Format) for MP3 Playback
20. **TF Port:** Input a Micro SD Card (FAT32 Format) for MP3 playback
21. **Digital Screen:** Displays the currently set mode, FM station or playback time

After Sales Support

☎ 1300 663 907

 


customercare@winplus.com.au

Model Number HE160821

Product Overview

Remote

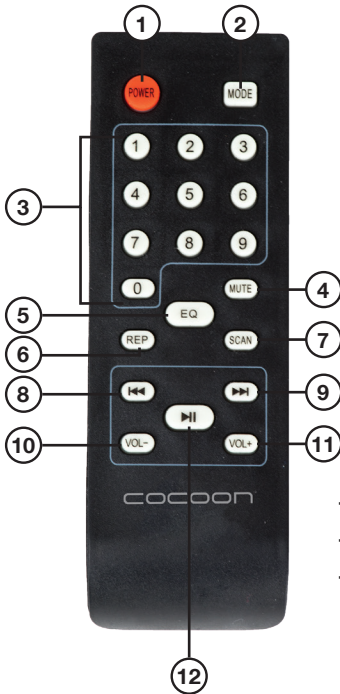

1. **POWER:** Turn ON/OFF the DJ Speaker's Standby Mode
2. **MODE:** Change between AUX, FM and Bluetooth modes
3. **0-9:** Select the track number during MP3 Playback
4. **MUTE:** Mute the audio output of the current mode
5. **EQ:** Select equaliser mode during MP3 Playback.
Selections are Normal, Pop, Rock, Jazz, Classical or Country
6. **REP:** Repeat a single MP3 file (ONE) or play through all MP3 files (ALL)
7. **SCAN:** Scan for available FM Stations
8. **PREV:** Navigate to the previous track or FM Station
9. **NEXT:** Navigate to the next track or FM Station
10. **VOL-:** Decrease the internal audio playback volume (0-30)
11. **VOL+:** Increase the internal audio playback volume (0-30)
12. **PLAY:** Play/Pause the current track

After Sales Support

☎ 1300 663 907



customercare@winplus.com.au

Model Number HE160821

Installation

1. Unpack

Unpack your Cocoon DJ Speaker with Party Lights and check that you have all of the components.

We recommend keeping the original packaging for storing your DJ Speaker and its components when not in use.

2. Insert Wireless Microphone Batteries

- a. Remove the battery cover from the rear of your Wireless Microphone
- b. Insert the included 2x Activ Energy AA Batteries, taking note of the correct polarity
- c. Secure the battery cover back in place



3. Insert Remote Control Batteries

- a. Remove the battery cover from the rear of your Remote Control
- b. Insert the included 2x Activ Energy AAA Batteries, taking note of the correct polarity
- c. Secure the battery cover back in place



Operation

Powering your DJ Speaker

Your Cocoon DJ Speaker is able to be powered directly from mains power as well as using the internal rechargeable battery.

Mains Power

1. Connect the AC Power Cable to the rear of the unit, plug into a mains power point and then switch the power point on
2. Turn the POWER switch on the front of the DJ Speaker to 'ON'

Recharging the Battery

When connected to mains power, the internal rechargeable battery will commence its recharge process. Use the 'BATTERY LED INDICATION' to determine the current battery state;

Red: Battery is recharging

Green: Battery is fully charged

Using the Rechargeable Battery

With the rechargeable battery charged, simply turn the POWER switch located at the front of the DJ Speaker to 'ON'.

***TIP:** If the mains power is disconnected while your DJ Speaker is turned on, the rechargeable battery will automatically activate.*

Aux Mode

1. With your DJ Speaker turned on, press the 'MODE' button on the Control Panel or the Remote Control, until 'AUX' is displayed on the Digital Screen
2. Using the included Aux Cable, connect one end to the AUX Port on the Control Panel, then connect the other end to the AUX Port on your audio device
3. You can now play audio through your DJ Speaker!
4. Rotate the 'VOLUME', 'TREBLE' and 'BASS' dials to your desired settings

Operation

FM Mode

1. With your DJ Speaker turned on, press the 'MODE' button on the Control Panel or the Remote Control, until 'FM' is displayed on the Digital Screen
2. On initial setup, or if your location has changed, press the 'SCAN' or 'PLAY' Button to automatically begin scanning nearby FM stations
3. Press the PREV or NEXT Buttons to jump between stations
4. Rotate the 'VOLUME', 'TREBLE' and 'BASS' dials to your desired settings

Bluetooth Mode

Pairing your DJ Speaker with a New Device

1. With your DJ Speaker turned on, press the 'MODE' button on the Control Panel or the Remote Control, until 'BLUE' is flashing on the Digital Screen. Your DJ Speaker is now in pairing mode
2. Follow the steps on your Bluetooth device to pair with 'HE160821'

TIP: When in Bluetooth Mode the DJ Speaker will automatically connect with any devices that it has previously been paired to. If pairing an additional device, ensure that already paired devices are disconnected from the DJ Speaker, and you have de-activated their Bluetooth

3. Once device is paired, 'BLUE' will remain solid on the Digital Screen
4. You can now play audio through your DJ Speaker!
5. Rotate the 'VOLUME', 'TREBLE' and 'BASS' dials to your desired settings

Pairing your DJ Speaker Device with an Existing Device

1. With your DJ Speaker turned on, press the 'MODE' button on the Control Panel or the Remote Control, until 'BLUE' is flashing on the Digital Screen. Your DJ Speaker is now in pairing mode

NOTE: Check the settings on your Device to ensure Bluetooth is activated

2. Once device is paired, 'BLUE' will remain solid on the Digital Screen
3. You can now play audio through your DJ Speaker!
4. Rotate the 'VOLUME', 'TREBLE' and 'BASS' dials to your desired settings

NOTE: While using Bluetooth Mode, your Wireless Microphone will only transmit when audio is being played.

Operation

MP3 Playback Mode

Insert a MicroSD or USB into your DJ Speaker to automatically activate MP3 Playback Mode.

Navigating Tracks

Use the 'PREV' or 'NEXT' buttons on the Control Panel or Remote Control

TIP: You can also use the 0-9 numeric keypad on the Remote Control to select a track.

Play/Pause

Use the 'PLAY' button on the Control Panel, or the [play/pause] on the Remote Control

Equalisation

Press the 'EQ' button on the Remote Control to select between Normal, Pop, Rock, Jazz, Classical or Country equaliser modes

Repeat

Press the 'REPEAT' button on the Control Panel or Remote Control to select between repeating the current track (ONE) or all tracks (ALL)

Audio Control

Rotate the 'VOLUME', 'TREBLE' and 'BASS' dials to your desired settings

Operation

Using the Party Lights

Use the LED Switch to turn on your Party Lights for the ultimate entertainment experience! Your Party Lights will commence flashing in combinations of green, red and blue.

Using the Wireless Microphone

Your Wireless Microphone will automatically pair with your DJ Speaker.

1. Slide the Mode Slider on the front of the microphone from OFF to ON. The BATTERY indicator will briefly flash red to indicate that the microphone has been activated
2. Rotate the 'ECHO' and 'MIC VOL' dials to your desired settings

TIP: Slide the Mode Slider from ON to MUTE to temporarily mute the microphone.

Using the Trolley Handle

Follow these steps to operate the trolley handle.

1. Depress the handle unlock button on the top of the handle
2. Raise or lower the handle to either the top, middle or bottom position
3. Release the handle unlock button and ensure the handle is securely in place

COCOON™

DJ Speaker with Party Lights

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia
PO BOX 537
Bayswater Business Centre
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customer@winplus.com.au
www.winplus.com.au

AFTER SALES SUPPORT

 (AUS) 1300 663 907

 customer@winplus.com.au

MODEL: HE160821 PRODUCT CODE: 53111 02/2016



cocoon™