

 **COCOON™**

AM/FM CAMPING LANTERN & TORCH



Model Number: HE115002

INSTRUCTION MANUAL



AM/FM Camping Lantern & Torch

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 **AUS** 1300 663 907

 customercare@winplus.com.au

MODEL: HE115002 PRODUCT CODE: 49117 03/2015



Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with warranty card, purchase receipt and packaging. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all warnings to reduce risk of fire or electric shock.

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures.
- There are no user-serviceable parts inside this product.
- Do not repair the unit yourself. If your device is not functioning correctly, disconnect the product from power, and contact after sales support.
- Supervise young children to ensure they do not play with the product.
- Do not expose to water, dust, moisture, chemicals, oils or other liquids.
- Do not expose to naked flames or other heat sources.
- Do not drop or subject the device to undue shock.
- Keep device away from magnets at all times.
- Keep away from direct sunlight.

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number HE115002

Contents

Warranty Details	2
Safety Instructions	3
Parts List	5
Technical Specifications	5
Product Overview	6
1.1 Product Features	6
1.2 Item Overview	6
Instructions	8
2.1 Unpack	8
2.2 Charging - Micro USB	8
2.3 Charging - Dynamo Handle	8
2.4 Charging an External Device	8
2.5 Using the Torch	9
2.6 Using the Radio	9
2.7 Using the Alarm	9
2.8 USB Cable Storage	9
Troubleshooting	10
Repair and Refurbished Goods or Parts Notice	11

After Sales Support



1300 663 907



customercare@winplus.com.au

Model Number HE115002

Parts List

- 1 x AM/FM Camping Lantern & Torch
- 1 x Micro USB Cable
- 1 x Instruction Manual
- 1 x Getting Started Guide
- 1 x Warranty Card

Technical Specifications

Weight:	360g
Dimensions:	Ø10cm x 18.5cm
Battery:	Rechargeable 800mAh, 3.7V
Output Voltage:	5V/500mA
Input Voltage:	5V via Micro USB Cable
FM Range:	76 – 108 MHz
AM Range:	520-1620 KHz

Approximate Running Time


1 Minute Cranking:

- 3-LED Spotlight: ≥ 15 Min.
- 10-LED Lantern: ≥ 6 Min.
- 5-LED Red Flashing: ≥ 120 Min.
- Radio Play: ≥ 6 Min.

Fully Charged:

- 3-LED Spotlight: ≥ 10 Hr.
- 10-LED Lantern: ≥ 4 Hr. 15 Min.
- 5-LED Red Flashing: ≥ 60 Hr.
- Radio Play: ≥ 10 Hr.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE115002

Product Overview

1.1 Product Features

The Cocoon AM/FM Camping Lantern is feature packed reducing the amount of gear you need to take camping. Charge the built in battery via Micro USB or dynamo hand crank to power super bright LED lights and an AM/FM radio. The lights can be used as a lantern or torch with a handle, or in an emergency the LEDs will strobe a red beacon light. Not only a light, the lantern will charge your mobile phone or other portable devices with a USB port and transmit radio for up to 10 hrs. The Cocoon AM /FM Camping Lantern is ideal for campsites, power outages or for peace of mind in emergencies.


NOTE: The lantern may not charge tablets, iPads or devices with higher voltage requirements

1.2 Item Overview



- | | |
|---------------------------|----------------------------|
| 1. Handle | 4. Radio/Alarm Mode Slider |
| 2. Handle Rotating Button | 5. Volume Dial |
| 3. Tuning Dial | 6. Crank Handle |

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE115002

Product Overview

1.2 Item Overview cont.



- 1. USB Port On/Off Switch
- 2. USB Port
- 3. Micro USB Charging Port


- 4. Lantern LEDs
- 5. USB Cable Storage Slot



- 1. Light Switch
- 2. Hanging Handle

- 3. Torch LED Lights

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE115002

Instructions

2.1 Unpack

Unpack the Cocoon AM/FM Camping Lantern & Torch and check you have all the components:

- 1 X AM/FM Camping Lantern & Torch
- 1 X Micro USB Cable

2.2 Charging - Micro USB

1. Using the included cable, insert the micro USB end into the AM/FM Camping Lantern & Torch slot located under the orange cover.
2. Insert the standard USB end into a USB power adaptor or computer.
3. The charging light will illuminate RED during charging.
4. Once the AM/FM Camping Lantern & Torch is fully charged, the charging light will change to green



Note: It may take between 2.5 to 4 hours to fully charge the camping lantern.

2.3 Charging - Dynamo Handle

1. Flip up the orange dynamo handle into a position ready for cranking, as per the image.
2. Crank the dynamo handle steadily. The charging light will illuminate RED as the handle is cranked.
3. When finished, flip the dynamo handle back to its original position.



Note: Do not crank the dynamo handle for longer than 5 minutes.


2.4 Charging an External Device

1. Ensure the camping lantern is sufficiently charged.
2. Insert the external device's USB charging cable into the USB.
3. Slide switch to ON to begin charging.
4. When finished charging, slide switch to OFF to ensure the camping lantern battery isn't drained.



Note: The lantern may not charge tablets, iPads or devices with higher voltage requirements.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE115002

Instructions

2.5 Using the Torch

1. Rotate the handle to the desired position by pressing the orange button at the base of the handle. The handle has a 90° range, as shown to the right.
2. Press the orange light switch on the handle to change between torch low/high and lantern mode.
3. Use the black hanging handle on the top of the camping lantern to hang from a desired location when in lantern mode.



2.6 Using the Radio

1. Select between AM or FM by using the orange slider.
2. Rotate the volume dial until it clicks on, then set to the desired volume.
3. Rotate the tuning dial to the desired station.



2.7 Using the Alarm

1. To sound the alarm and turn on the red strobing LED's, select ALARM using the orange slider.


NOTE: The alarm will continue to sound until you select AM or FM with the slider.

2.8 USB Cable Storage

The main handle has a convenient slot to store the micro USB cable when not in use. Slide the orange cap upwards to reveal the cavity and store cable. Clip the cap back on when the cable is stored.



After Sales Support

 1300 663 907


 customercare@winplus.com.au

Model Number HE115002

Troubleshooting

Problem	Solution
My lantern is heating up	<ul style="list-style-type: none"> • The lantern may heat up if cranking for a long time or if exposed to high temperature or humid environments. Turn off the torch and radio and remove the lantern from any warm or humid environments to allow it to cool down.
I can't hear my radio	<ul style="list-style-type: none"> • First check the volume dial. Check if the lantern LEDs are also working. If not then recharge the lantern and try the radio again. • Ensure your lantern is tuned to a frequency with radio reception.
My radio doesn't sound clear.	<ul style="list-style-type: none"> • If you are receiving too much static through the radio, first try slowly rotating the tuning dial. If the signal is still static, it may be that your location has a weak signal for that station.
My USB device isn't charging	<ul style="list-style-type: none"> • Ensure that the USB Port On/Off Switch is set to ON. • It may be that the lantern's internal battery is low. Recharge the lantern before reconnecting the USB device. • The lantern may not charge some tablets or devices with high capacity batteries. Please check the voltage requirements of the device you are trying to charge.

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE115002

10



AM/FM Camping Lantern & Torch

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia
PO BOX 537
Bayswater Business Centre
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customercare@winplus.com.au
www.winplus.com.au

AFTER SALES SUPPORT



 customercare@winplus.com.au

MODEL: HE115002 PRODUCT CODE: 49117 03/2015



