



AM/FM CAMPING LANTERN & TORCH Getting Started Guide



1. UNPACK

Unpack the Cocoon AM/FM Camping Lantern & Torch from the packaging and check you have all the components:

- 1 X Cocoon AM/FM Camping Lantern & Torch
- 1 X Micro USB Cable



2. CHARGE

1. Using the included cable, insert the micro USB end into the AM/FM Camping Lantern & Torch slot located under the orange cover.
2. The lantern can also be charged using the crank handle. Flip the handle up and steadily rotate to charge.

NOTE: Do not crank continuously for more than 5 minutes.



3. USE

LIGHT

1. Rotate the handle to the desired position by pressing the orange button at the base of the handle. The handle has a 90° range, as shown below.
2. Press the orange light switch on the handle to change between torch low/high and lantern mode.

AM, FM OR ALARM

3. Select between AM or FM by using the orange slider.
4. Rotate the volume dial until it clicks on, then set to the desired volume.
5. Rotate the tuning dial to the desired station.
6. To sound the alarm and turn on the red strobing LED's, select ALARM using the orange slider.

