



KARAOKE MACHINE GETTING STARTED GUIDE

1 UNPACK FROM THE BOX
Unpack your Karaoke Machine



2 CONNECT THE POWER CABLE
Connect the power adaptor to the rear of the unit, plug into a mains power point, and then switch the power point on.



3 CONNECT YOUR MICROPHONE
Connect the included microphone to the port marked MIC 1 on the front of the unit.



4 TURN ON THE KARAOKE MACHINE
Press the power button on the front of the unit.





KARAOKE MACHINE GETTING STARTED GUIDE



5 TURN ON THE MICROPHONE

Turn on the wired microphone using the switch located on the microphone handle. Turn up the MIC VOLUME dial.



6 INSERT A CD

Gently open the CD compartment as shown and insert your favourite audio CD. Close the lid.



7 PLAY YOUR CD

Press the Play/Pause button **▶||** to begin CD playback and adjust volume using the MASTER VOLUME dial.



8 START ROCKING OUT!

Hold the microphone around 3cm from your mouth and start singing along!

Congratulations your Karaoke Machine is now ready to use. Consult the instruction manual for advanced features and functions.

