




GETTING STARTED GUIDE

Shower Radio

Model Number: HE414078

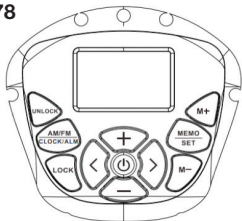

Installing Batteries

1. Remove the battery cover using a small Phillips head screwdriver.
2. Insert the included 3 x AAA Activ Energy batteries following the polarity markings in the compartment.
3. Replace the cover and tighten the screws to ensure a secure fit.

Turning On/Off

1. Press the  to turn radio On/Off.


Backlight

1. Press the light button to turn the backlight on/off – press any button to turn on the backlight.


Volume Control

1. Use the + button to increase volume.
2. Use the – button to decrease volume.

Selecting AM/FM

1. Turn on the radio using the  button.
2. Press the AM/FM/CLOCK/ALM button to cycle through AM/FM settings.

Scanning for Stations

1. Turn on the radio using the  button.
2. Press the AM/FM button to select AM or FM frequency.
3. Press the < or > to manually increase or decrease the frequency selection.



GETTING STARTED GUIDE

Shower Radio

Model Number: HE414078




Saving Preset Stations

1. When you have selected the frequency you wish to save, press the MEMO button.
2. Use the M+ or M- to select the preset location. There are 20 preset locations to use per band.
3. Press the MEMO/SET button to confirm your selection.



Auto Scan & Preset

1. When you have selected the band you wish to use, press and hold the MEMO/ SET for 3 seconds.
2. This will automatically scan and save the next 20 stations from lowest to highest frequency.

Setting the Time

1. Turn OFF the radio using the  button.
2. Press the AM/FM/CLOCK/ALM button to cycle through Clock and Alarm settings.
3. Press the MEMO/ SET to enter into time setting, the hour digits will flash, use the < or > to set the hour and press MEMO/ SET to confirm.
4. The minute digits will flash, use the < or > to set the minutes and press MEMO/ SET to confirm.
5. Press < or > to select 12/24hr time format and press MEMO/ SET to confirm.

Setting an Alarm

1. Turn OFF the radio using the  button.
2. Press the AM/FM/CLOCK/ALM button to cycle through Clock and Alarm settings.
3. Press the MEMO/ SET to enter into alarm setting.
4. The hour digits will flash, use the < or > to set the hour and press MEMO/ SET to confirm.
5. The minute digits will flash, use the < or > to set the minutes and press MEMO/ SET to confirm the alarm and return to time display mode.
6. Press the AM/FM/CLOCK/ALM to turn the alarm ON/OFF, when there is an alarm set there will be a  symbol on the LCD display.