

COCOON™ POWER BANK MAKEUP MIRROR

Getting Started Guide


Setup

1. Before use, fully charge the Power Bank Makeup Mirror using the included micro USB charging cable.
2. Plug the USB cable into a computer or any USB wall adaptor (not included).
3. Connect the micro USB cable to the Power Bank Makeup Mirror.
4. When all blue lights on the side of the Makeup Mirror are lit, it is fully charged.



Operation

1. Open the Power Bank Makeup Mirror by pushing up the lever. The top mirror has 5x magnification while the lower base mirror has normal magnification.
2. To turn ON/OFF the LED lights, long press the button on the side of the device.
3. To check the battery status, short press the side button. Depending on the battery charge, 1 or more of the blue lights will appear. If no lights appear, charge your Power Bank Makeup Mirror.
4. To charge another device such as a mobile phone, plug the device's USB cable into the USB port on the side of the Power Bank Makeup Mirror (phone and USB cable to charge your device not included).

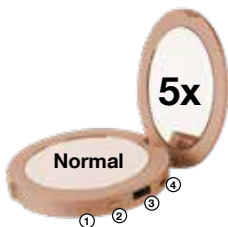

1. Battery indicator lights
2. On/off button
3. USB port
4. Micro USB port



Technical Specifications

- Internal battery: 2800mAh lithium battery
- Input: DC 5V $\overline{\text{---}}$ 1A
- Output: DC 5V $\overline{\text{---}}$ 2A Max
- Product size: 9cm diameter, 1.5cm width

Product Features

- Dual mirrors with normal & 5 x magnification
- 8 x long life natural LED lights with cool touch technology
- In-built power bank – charge devices on the go via USB cable (not included)
- Battery indicator lights
- Micro USB charging cable included

Safety Instructions

1. Handle with care. Avoid dropping this device, especially on a hard surface. Do not crush, bend, deform, puncture, shred or submerge this device in liquid.
 - Do not squeeze or puncture the Power Bank to avoid electrolyte leakage of lithium-ion battery.
 - Only use the Power Bank in moderate climates.
 - Do not use a damaged cable or power charger to charge the Power Bank.
 - Never use the Power Bank if any part of it is damaged.
 - Do not attempt to open or disassemble this device.
 - Do not get the Power Bank wet or immerse it in water. If it has become wet, do not attempt to dry it with an appliance such as a hair dryer or in a microwave oven.
 - Do not wash the Power Bank with corrosive cleaner.
 - Do not use this Power Bank in areas where paint, petrol etc. is stored and there is a risk of explosion or fire from flammable gases.
 - Children should be supervised to ensure they do not play with this appliance. Close supervision is necessary when any appliance is used by or near children.
 - To avoid a fire hazard, keep the Power Bank away from open fires, stoves or any other sources of high heat.
 - At the end of its working life, observe local regulations when disposing of this product.
 - Attention should be drawn to the environmental aspects of battery disposal.
 - The battery should be charged at least every three months to avoid shortening the battery life.
 - Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.