

COCOON
KIDS™
**Karaoke
Machine**
with Bluetooth®



Getting Started Guide

Model: HE414118

PLU: 49572

07/2018

1

UNPACK

Unpack your Cocoon Kids Karaoke Machine and check that you have all of the components:

1x Karaoke Machine

2x Microphones

1x AC Power Cable

1x RCA Cable

1x Instruction Manual

1x Warranty Card

1x Getting Started Guide



2

CONNECT THE POWER CABLE

Connect the AC Power Cable to the rear of the unit, plug into a mains power point and then switch the power point ON.



3

CONNECT YOUR MICROPHONE

Connect the included microphone to the port marked MIC 1 on the front of the unit. To connect two microphones, connect the second microphone to the port marked MIC 2.



4

TURN ON THE KARAOKE MACHINE

Press the power button ON the front of the unit.



Version 1.0

COCOON
KIDS™

Karaoke Machine

with Bluetooth®



Getting Started Guide

Model: HE414118
PLU: 49572
07/2018

5

TURN ON THE MICROPHONE

Turn ON the wired microphone using the switch located on the microphone handle. Adjust the volume by rotating the MIC1 VOLUME dial. Repeat the same process if using two microphones.

6

INSERT A CD

Gently open the CD compartment as shown to the right. Remove the protective card from the CD compartment before inserting your favourite audio CD. Once the audio CD is in place, close the lid.



7

PLAY YOUR CD

Press the Play/Pause button to begin CD playback and adjust volume using the MASTER VOLUME dial.

8

START ROCKING OUT

Hold the microphone around 3cm from your mouth and start singing along!