

# COCOON™

## BLUETOOTH® SPEAKER

# Getting Started Guide

Model Number: HE170611S  
PLU: 59381  
11/2017

## 1. UNPACK

Unpack the contents from the box

- 1 x Cocoon Bluetooth Speaker
- 1 x 3.5mm Audio Cable
- 1 x Micro USB Charging Cable
- 1 x Getting Started Guide
- 1 x Warranty Card

## 2. CHARGE YOUR SPEAKER

Before first use, it is recommended that you charge your Bluetooth Speaker for a minimum of 1 hour. Connect the supplied Micro USB charging cable to the Micro USB port on the bottom of the Bluetooth Speaker (this is covered by a rubber seal). Connect the other end to a spare USB port on your laptop, computer or USB wall charger (not included).

## 3. POWER ON / OFF

Press and hold the Power Button for 3 seconds to switch on or off.

## 4. ACTIVATE BLUETOOTH SPEAKERS PAIRING MODE

While the Bluetooth Speaker is off, press and hold the power button down for 3 seconds. The Bluetooth Speaker will turn on and enter pairing mode automatically. The Bluetooth Speaker will give an audio cue "The Bluetooth Device Is Ready to Pair". When the Bluetooth Speaker has been paired to another device, the Bluetooth on that device will need to be turned off to allow another device to pair.

## 5. SEARCH FOR THE BLUETOOTH SPEAKER



Activate the Bluetooth feature on your MP3 player or smartphone. Search for the device "HE170611S" and pair as per your MP3 player or smartphone's instruction manual.

## 6. SUCCESSFULLY PAIR WITH THE BLUETOOTH SPEAKER

When the Bluetooth Speaker is successfully paired with your device the Bluetooth Speaker will give an audio cue "The Bluetooth Device Is Connected Successfully". Your MP3 player or phone will remember pairing with the speaker for future use.

## 7. START AUDIO PLAYBACK

Start audio playback on your phone or MP3 player. Control the volume and track playback using the control pad located on the top of the Bluetooth Speaker. To increase/decrease the volume, hold down the + or - buttons. To skip songs short press the ►► or ◀◀ buttons. To pause music short press the Power Button.

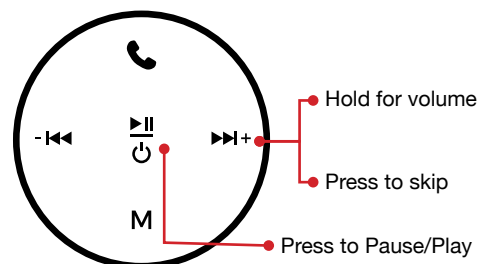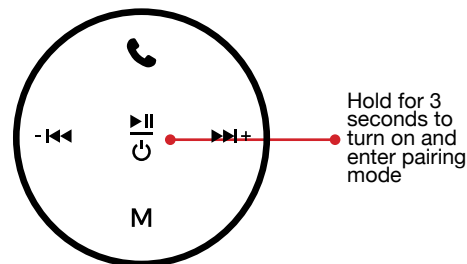

# COCOON™ BLUETOOTH® SPEAKER

## Getting Started Guide

 
### 8. USING THE HANDSFREE FUNCTION

Press the Phone button while the phone is ringing to answer an incoming call.

Press the Phone button to end the call.

Press and hold the Phone button while the phone is ringing to reject an incoming call.


Press the Phone button twice to dial your last number called.

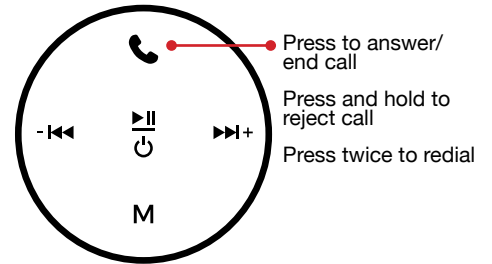

### 9. USING THE RADIO FUNCTION


After turning the Bluetooth Speaker on, quick press the 'M' button. The Bluetooth Speaker will give an audio cue "The Radio Mode". Press Play/Pause Button to search and automatically store all radio stations. It will take approximately 1 minute to complete searching and storing the radio stations. To increase/decrease the volume, hold down the + or - button. To change between stored radio stations short press the >>> or <<< buttons.

 **NOTE:** A Micro USB cable must be plugged into Micro USB port to enhance FM reception

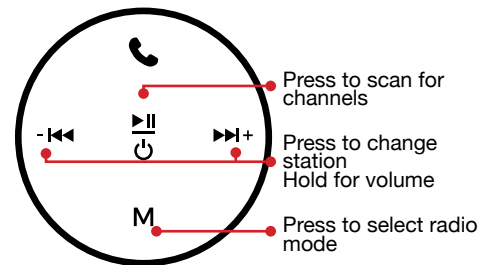

### 10. USING MICRO SD CARD FUNCTION

 When a Micro SD Card is inserted into the Bluetooth Speaker this function will start automatically. The Bluetooth Speaker will give an audio cue "Music Play Mode". To increase/decrease the volume, hold down the + or - buttons. To skip songs short press the >>> or <<< buttons. To pause music short press the Power Button.

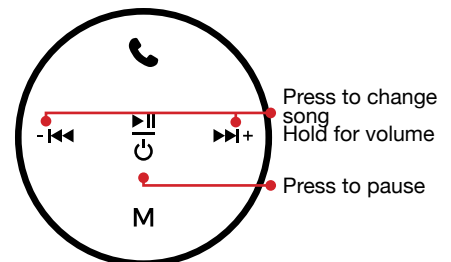

### 11. USING THE LINE-IN FUNCTION

Insert the supplied 3.5mm Audio Cable into the AUX port on the bottom of the Bluetooth Speaker and plug the other end into portable device.

**NOTE:** When AUX in cable is inserted, speaker will turn to Aux in mode automatically

To increase/decrease the volume, hold down the + or - button.

Press 'M' button to switch between Bluetooth mode, Radio mode, AUX in mode and SD Card mode.

