

COCOON™

BLUETOOTH® HEADPHONES

Getting Started Guide

Model Number: HE170611H
PLU: 59381
11/2017

1. UNPACK

Unpack the contents from the box

- 1 x Cocoon Bluetooth Headphones
- 1 x Micro USB Charging Cable
- 1 x 3.5mm Audio Cable
- 1 x Getting Started Guide
- 1 x Warranty Card



2. CHARGE YOUR HEADPHONES

Before first use, it is recommended that you charge your Bluetooth Headphones for a minimum of 1 hour. Connect the supplied Micro USB charging cable to the Micro USB port on the bottom of the right ear pad. Connect the other end to a spare USB port on your laptop, computer or USB wall charger (not included).



3. POWER ON / OFF

Press and hold the Power Button for 3 seconds to switch on or off.

4. ACTIVATE HEADPHONE PAIRING MODE

While the Bluetooth Headphones are off, press and hold the Power Button for 3 seconds. The Bluetooth Headphones will enter pairing mode. The Bluetooth Headphones will give an audio cue "Bluetooth Mode".

NOTE: On first use headphones will automatically enter pairing mode.

NOTE: The LED will flash blue and green rapidly, when in pairing mode.

When the Bluetooth Headphones have been paired to another device, the Bluetooth on that device will need to be turned off to allow another user to pair with the headphones.

5. SEARCH FOR THE HEADPHONES

 
 
 
Activate the Bluetooth feature on your MP3 player or smartphone. Search for the device "HE170611H" and pair as per your MP3 player or smartphone's instruction manual.

6. SUCCESSFULLY PAIR WITH THE HEADPHONES

When the Bluetooth Headphones are successfully paired with your device the Bluetooth Headphones will chime. The LED on the bottom of the ear pad will be solid blue when connected via Bluetooth. Your MP3 player or phone will remember pairing with the headphones for future use. When the Bluetooth Headphones are playing music, the LED will flash slowly.

7. START AUDIO PLAYBACK

Start audio playback on your phone or MP3 player. Control the volume and track playback using the control pad located on the side of the right ear pad. To increase/decrease the volume, hold down the V+ or V- button. To skip songs short press the ►► or ◀◀ buttons. To pause music short press the Power Button, press it again to resume.

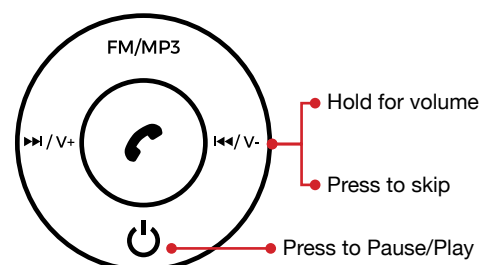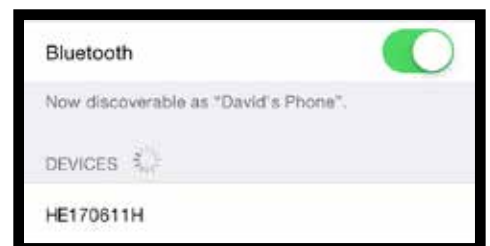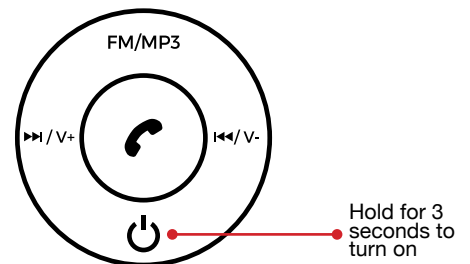

COCOON™ BLUETOOTH® HEADPHONES

Getting Started Guide

 
8. USING THE HANDSFREE FUNCTION

Press the Phone button while the phone is ringing to answer an incoming call.

Press the Phone button to end the call.

Press and hold the Phone button while the phone is ringing to reject an incoming call.


Press the Phone button twice to dial your last number called.

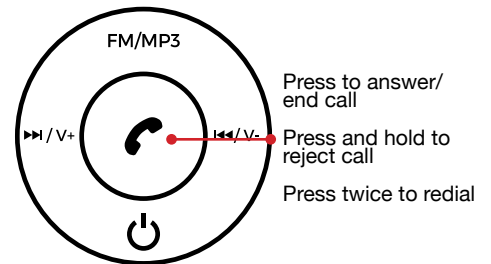

9. USING THE RADIO FUNCTION

After turning the Bluetooth Headphones on, hold the FM/ MP3 button down.

 
The Bluetooth Headphones will give an audio cue "Radio Mode". Press Power Button to search and automatically store all radio stations. It will take approximately 1 minute to complete searching and storing the radio stations. To increase/decrease the volume, hold down the V+ or V- button. To change between stored radio stations short press the ►► or ◀◀ buttons.

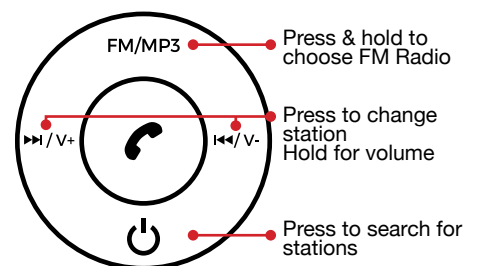

10. USING MICRO SD CARD FUNCTION

When a Micro SD Card is inserted into the headphones this function will start automatically. The Bluetooth Headphones will give an audio cue "Play by SD Card". To increase/decrease the volume, hold down the V+ or V- button. To skip songs short press the ►► or ◀◀ buttons. To pause music short press the Power Button.

 Hold the FM/MP3 button down to switch between Bluetooth mode, Radio mode and SD Card mode.

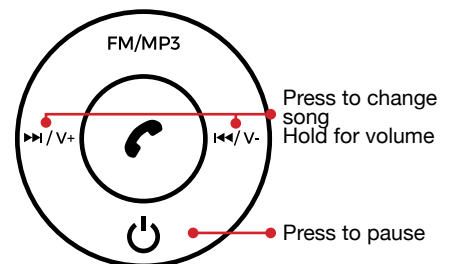

11. USING THE LINE-IN FUNCTION

Insert the supplied 3.5mm Audio Cable into the jack of the Bluetooth Headphones and plug the other end into your portable device.

NOTE: When using Line-In mode, all control functions will be disabled



12. USING THE EQUALIZER

When listening to music via the Micro SD Card, short press the FM/MP3 button to toggle through different Equaliser options. There are 6 Equaliser Options. Natural, Pop, Rock, Jazz, Country and Heavy Bass.

