

COCOON™ DJ Speaker with Party Lights

Getting Started Guide



HE160821
02/2016

1. UNPACK

Unpack your Cocoon DJ Speaker with Party Lights and check that you have all the components:

1 x Cocoon DJ Speaker with Party Lights
1 x Remote Control
1 x Wireless Microphone
1 x 3.5mm Aux Cable
1 x Power Cable

2 x Activ Energy AA Batteries
2 x Activ Energy AAA Batteries
1 x Warranty Certificate
1 x Instruction Manual
1 x Getting Started Guide



2. INSERT MICROPHONE BATTERIES

Remove the battery cover from the rear of your Wireless Microphone, then insert the included 2x Activ Energy AA Batteries, taking note of correct polarity. Secure the battery cover back in place.



3. INSERT REMOTE BATTERIES

Remove the battery cover from the rear of your Remote Control, then insert the included 2x Activ Energy AAA Batteries, taking note of correct polarity. Secure the battery cover back in place.



4. CONNECT POWER CABLE

Connect the AC Power Cable to the rear of the unit, plug into a mains power point and then switch the power point on.

COCOON™ DJ Speaker with Party Lights

Getting Started Guide



HE160821
02/2016



5. TURN ON THE DJ SPEAKER

Turn the POWER switch on the front of the DJ Speaker to ON.



6. SELECT YOUR DESIRED INPUT MODE

Press the MODE button on the DJ Speaker control panel to select between AUX, FM and Bluetooth options. Alternatively, you can insert a Micro SD Card or USB into the appropriate port on the front of the DJ Speaker.

AUX Mode: Insert the audio cable from the INPUT AUX port, to your audio device

FM Mode: Select PLAY to automatically scan nearby FM stations, then press the Prev/Next buttons to jump between stations

Bluetooth: Your DJ Speaker will commence pairing mode. Follow the steps on your Bluetooth device to pair with 'HE160821'



7. TURN ON THE MICROPHONE

On the Microphone, slide the Mode Slider from OFF to ON. The BATTERY indicator will briefly flash red to indicate that the Microphone has been activated. To adjust the Microphone volume, use the 'MIC VOL' dial located on bottom of the DJ Speaker control panel.



8. TURN ON THE DISCO PARTY BALL

Turn the LED switch on the front of the DJ Speaker to ON

9. ENJOY

Congratulations! You have successfully set up your Cocoon DJ Speaker with Party Lights!