

3D Pen

Getting Started Guide

HE150277
02/2016



1. UNPACK

Unpack your Cocoon Create 3D Pen from the packaging and check you have all of the components:

- Cocoon Create 3D Pen
- 3 x 3 Metre 1.75mm ABS filament
- 1 x Power Adaptor
- 1 x Getting Started Guide
- 1 x Instruction Manual
- 1 x Warranty card



2. CONNECT TO POWER

Connect one end of the power adaptor to the power jack located at the end of the pen, then connect the other end to a mains power outlet and switch on. The Power Indicator LED will turn on.



3. HEATING THE 3D PEN

Press the Forward Button to begin heating the 3D Pen. The Heat Indicator LED will turn red when the pen is being heated. Once the 3D Pen has reached the pre-set temperature, the Heat Indicator LED will turn green.


NOTE: Refer to manual for temperature settings

3D Pen

Getting Started Guide



HE150277
02/2016

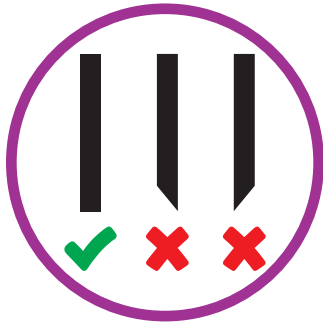

4. TRIM FILAMENT

Cut your desired length filament and ensure the tips of both ends are flat.



5. INSERT AND LOAD FILAMENT

Insert one end of the filament into the Filament Port. Press and hold the Forward Button to begin loading until filament is extruded from the nozzle.



6. DRAW!

Hold the Forward Button to extrude and draw. To stop, release the Forward Button. You can change the speed of filament extrusion with the Speed Slider.



For ideas and templates visit
cocooncreate.com.au

