

COCOON™
retro

Digital Radio



Model Number: HE150112

INSTRUCTION MANUAL



Retro Digital Radio

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AUS) 1300 663 907

 customercare@winplus.com.au

MODEL: HE150112 PRODUCT CODE: 52241 11/2015



Warranty Note

If you experience any issues with this product, or it's performance is not what you had expected, please contact us at Winplus before returning the item to the store.

It is likely that we can resolve any problems for you via phone or email.

We can be reached on:

Phone: 1300 663 907 (Mon - Fri; 8:30am - 6:00pm EST)

Email: customercare@winplus.com.au

Web: www.winplus.com.au

Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures.
- Do not attempt to open the product housing. There are no user-serviceable parts inside this product.
- Do not repair the unit yourself. If your device is not functioning correctly, disconnect the product from power, and contact after sales support.
- Supervise young children to ensure they do not play with the product.
- Do not expose to chemicals, oils, or other liquids.
- Do not expose to naked flames or other heat sources.
- Do not drop or subject the device to undue shock.
- Keep device away from magnets at all times.
- Keep away from direct sunlight. Indoor use only.
- Unplug this device during lightning storms or when unused for long periods of time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Contents

Warranty Details	3
Safety Instructions	5
Parts List	7
Technical Specifications	7
Product Overview	8
Front View	8
Rear View	9
Instructions	10
Power On/Off	10
DAB+ Operation	10
FM Operation	10
Preset Stations	10
Adding a Station to Preset	11
Retrieving a Preset Station	11
Bluetooth Operation	11
AUX Operation	11
Using the Alarm	12
FAQs	13
Repair and Refurbished Goods or Parts Notice	15

Parts List

1x Retro Digital Radio
 1x Power Adaptor
 1x Instruction Manual

1x Getting Started Guide
 1x Warranty Card



Technical Specifications

Speaker Output:	2 x 5W
Digital Radio Range:	174 MHz – 230 MHz
FM Range:	87.5 MHz – 108.0 MHz
Bluetooth:	2.0
Preset Station Limit:	20 (10 DAB + 10 FM)
Features:	Alarm Clock Auto Tune LCD Display AUX Input
Input Rating:	7.5V $\overline{=}$ 2A

Product Overview

Front View




- 1. Power Button
- 2. Scan Button
- 3. Menu Button
- 4. Info Button
- 5. Alarm Button

- 6. Source Button
- 7. Preset Button
- 8. Memory 1 Button
- 9. Memory 2 Button
- 10. Memory 3 Button

- 11. Volume Dial
- 12. Display
- 13. Tuning/Selection Dial

After Sales Support

 1300 663 907


 customercare@winplus.com.au

Model Number HE150112

11/2015

Product Overview

Rear View

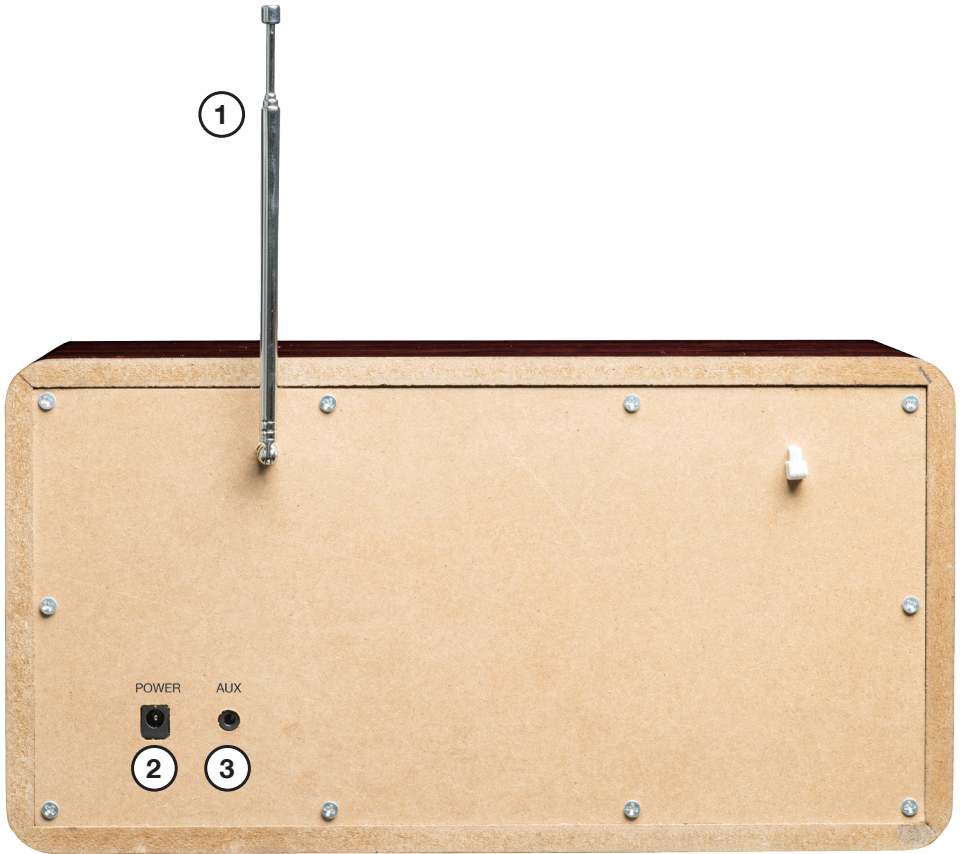


1. Telescopic Antenna

2. Power Port

3. AUX In Port

After Sales Support

 1300 663 907

 customercare@winplus.com.au

Model Number HE150112

11/2015

Instructions

Power On/Off

1. Insert the power adaptor into the POWER PORT on the back of the radio and connect the other end to a power outlet. The Retro Digital Radio clock will turn on and automatically set the time.
2. Press the POWER button to turn on the Radio.
3. Press the Source Button to change between modes.

Note: To return to standby mode, press the POWER button again.

DAB+ Operation

1. Press the Source Button until DAB mode is selected.
2. If this is your first use, or you've moved to a new area, press the SCAN button to automatically scan for local stations.
3. To change between stations, rotate the TUNE/SELECT dial.
4. Use the VOLUME dial to adjust to your desired level.

Note: You can press the INFO button to display additional information.

FM Operation

1. Press the Source Button until FM mode is selected.
2. To jump to the next available station, press the SCAN button.
3. To tune into another station, rotate the TUNE/SELECT dial.
4. Use the VOLUME dial to adjust to your desired level.

Note: You can press the INFO button to display additional information.

Preset Stations

Your Retro Digital Radio allows up to 20 (10 DAB and 10 FM) stations to be saved for quick access.

Instructions

Adding a Station to Preset

1. Whilst in DAB or FM mode, tune into a station that you wish to add to your Preset.
2. Hold the PRESET button, until the LCD displays a flashing number on the bottom right corner.
3. Rotate the TUNE/SELECT dial until you reach your desired preset position. Press the TUNE/SELECT dial to set.
4. The LCD will display a confirmation message, such as 'Preset 1 Stored'

Note: You can also quickly add a station to the 1, 2, or 3 memory button by holding the respective button down on the front of the radio until it states "Preset Stored".

Retrieving a Preset Station

1. To retrieve a station from the 1, 2 or 3 memory button, press the respective button on the front of the radio.
2. To retrieve a station from 4 to 10, press the PRESET button, then rotate the TUNE/SELECT dial until the desired station is shown. Press the TUNE/SELECT dial to select the station.

Bluetooth Operation

1. Press the Source Button until BT mode is selected.
2. When Bluetooth mode is activated, it will commence 'PAIRING'. Follow the instructions on your smartphone to pair with 'HE150112'.
3. You can now play music through Bluetooth.
4. Use the VOLUME dial to adjust to your desired output level.

AUX Operation

1. Press the Source Button until AUX mode is selected.
2. Insert an AUX cable (not included) into the back of the radio.
3. Insert the other end of the AUX cable into your device.
4. You can now play audio through the Retro Digital Radio speakers. Use the VOLUME dial to adjust to your desired output level.

Instructions

Using the Alarm

Your Retro Digital Radio allows 2 alarms to be set.

Setting an alarm:

1. Press the 'ALARM' button until either 'Alarm1' or 'Alarm2' is shown, then rotate the 'TUNE/SELECT' dial to change the alarm from 'OFF' to 'ON'. Press the 'TUNE/SELECT' dial to proceed.
2. Rotate the 'TUNE/SELECT' dial to select the alarm hour. Press the 'TUNE/SELECT' dial to proceed.
3. Rotate the 'TUNE/SELECT' dial to select the alarm minute. Press the 'TUNE/SELECT' dial to proceed.
4. Rotate the 'TUNE/SELECT' dial to select the alarm occurrence. Select between Daily, Weekdays, Weekly or Once. Press the 'TUNE/SELECT' dial to proceed.
5. Rotate the 'TUNE/SELECT' dial to select the alarm beeper sound. Select between Beeper1, Beeper2, DAB or FM. Press the 'TUNE/SELECT' dial to set your alarm.

Note: If an alarm has been set, an alarm icon is shown on the clock display.

Stopping the Alarm

Once the alarm is activated, deactivate it by pressing the 'TUNE/SELECT' dial.

Removing an Alarm

Press the 'ALARM' button until either 'Alarm1' or 'Alarm2' is shown, then rotate the 'TUNE/SELECT' dial to change the alarm from 'ON' to 'OFF'. Press the 'TUNE/SELECT' dial to proceed.

FAQs

Question	Solution
My Retro Digital Radio isn't turning on.	Check that the power adaptor is connected to the back of the radio. Ensure that the wall outlet is switched to ON. If still no success, try disconnecting the power and reconnecting again.
Why is there no sound?	<ul style="list-style-type: none"> • Ensure that you are in DAB or FM mode by checking the LCD Display. If only the clock is shown, press the POWER button. • Turn the volume dial clockwise to increase the volume. • No station may be tuned in. Adjust the TUNE/SELECT dial to select a station.
Why are the buttons not responding?	Disconnect the power and reconnect again.
Why does the FM and DAB have static or intermittent cut-outs?	<ul style="list-style-type: none"> • Your signal reception may be too low, extend and adjust the antenna, or move to a stronger signal location • You can also try pressing the SCAN button to rescan for stations.
I can't find my desired radio station.	Try using the TUNE/SELECT dial to manually tune into your station. If using DAB, try pressing the SCAN button to rescan for stations.
What does the MENU button do?	The MENU button can also be used as a SELECT button.



Retro Digital Radio

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.


If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

Winplus Australasia
PO BOX 537
Bayswater Business Centre
Bayswater, VIC 3153

Winplus Help Desk 1300 663 907
(Operating Hours: Mon-Fri 08:30AM to 6:00PM)

customercare@winplus.com.au
www.winplus.com.au

AFTER SALES SUPPORT

 (AUS) 1300 663 907

 customercare@winplus.com.au

MODEL: HE150112 PRODUCT CODE: 52241 11/2015



 cocoon™