



# 7" TABLET GETTING STARTED GUIDE

## 1 UNPACK CONTENTS

Remove the contents of the box and ensure you have all included accessories

- 1 x 7" Kids Tablet
- 1 x Rubber Case
- 1 x Power Adaptor
- 1 x USB Cable
- 1 x Instruction Manual
- 1 x Getting Started Guide
- 1 x Warranty Card



## 2 CHARGE YOUR TABLET

Connect the included power adaptor to a power outlet. Connect the plug to the power input located on the bottom of the tablet. Turn on the power outlet.

***Tip: Charge your tablet for 4hrs before first use to maximise battery life.***



## 3 POWER ON YOUR TABLET

To turn on your tablet, press and hold the power button located on the side of the tablet for 3 seconds.

***Tip: If your screen is asleep, you can press the power button once to wake up the screen again.***





## 7" TABLET GETTING STARTED GUIDE



### 4

#### CONNECT TO WI-FI



To access some features of the Cocoon Kids 7" Tablet and KIDO'Z you will require internet access. Below is a guide on how to connect Wi-Fi on your Cocoon Kids 7" Tablet.

- A. When you turn on your tablet, you will be presented with the KIDO'Z setup page. At the bottom of your screen, if you swipe up, you will see the below icons.



- B. Press the  to return to the Android home screen.  
 C. On the Android home screen, at the bottom, press the settings button to access the settings menu.   
 D. At the top of the settings menu, you will see your Wi-Fi is toggled "ON"  
 E. Press "Wi-Fi" to enter the Wi-Fi settings screen.



- F. Once your Wi-Fi is turned on, you will see a list of the available nearby Wi-Fi connections. Select the Wi-Fi connection you wish to connect to.  
 G. If security settings are enabled on your wireless network you will be prompted to enter the password of your network.  
 H. Once you have entered your password, select Connect to finish setup.  
 I. When you are connected to Wi-Fi, press the  button from the tablet menu to return to the Android home page.  
 J. From here you can access KIDO'Z and complete set up by pressing the App icon 


Charges may apply for internet usage. Please contact your service provider for more details



## 7" TABLET GETTING STARTED GUIDE

### 5 SETUP KIDO'Z

When you start KIDO'Z for the first time you will be prompted to setup your KIDO'Z account. Swipe left and right to scroll through some quick information about KIDO'Z. Press the "Let's Start" button to begin setup.

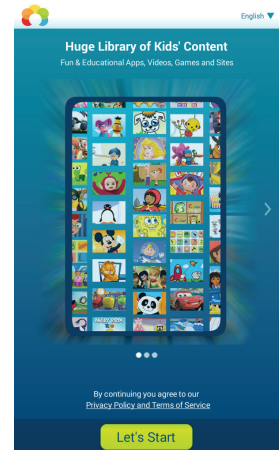


### 6 CREATE ACCOUNT

Follow the prompts to create your account by entering a valid email address and your preferred parent password.

**Tip: Keep track of the password you use as this will be used for accessing the parental controls.**


**Note: You will require internet access to sign up for an account. Refer to step 4 for information on how to setup your tablets' Wi-Fi.**

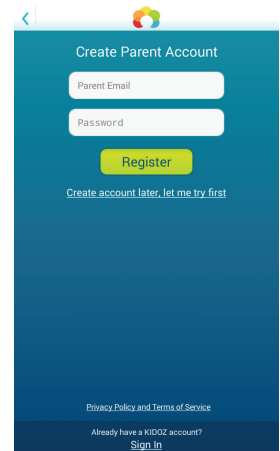

### 7 CREATE YOUR CHILD'S PROFILE

Customise your child's account by adding their name, age and gender. This will setup the pre-loaded content to ensure that it is age appropriate for your child.

 **Tip: You can add more than one child's profile so your kids can share the tablet but keep all their apps separate.**

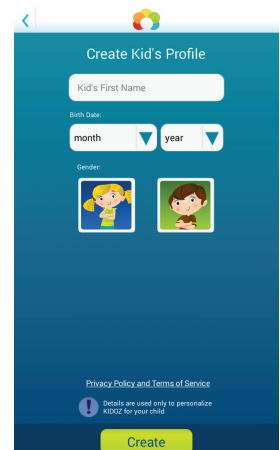




## 7" TABLET GETTING STARTED GUIDE


### 8 SELECT KIDO'Z AS YOUR DEFAULT LAUNCHER

Next follow the on-screen prompts to load KIDO'Z by default whenever you turn on your tablet. This allows your child to begin using the tablet straight away without your help.

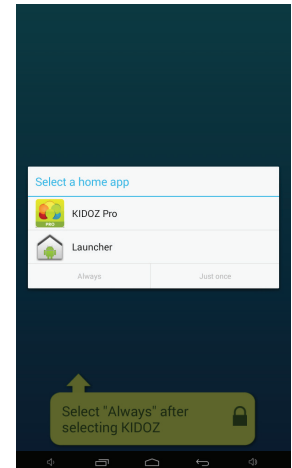

### 9 SELECT YOUR FIRST ACTIVITY!

 KIDO'Z has access to 100's of apps, games and videos for your child to play, learn and enjoy. You can also access the KIDO'Z store through the "More Apps" button. This will give you access to a great selection of Apps that have been chosen as being Kid Safe!

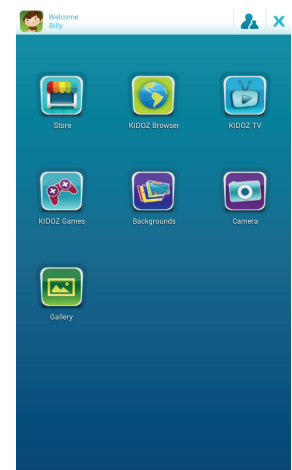

Congratulations your 7" Tablet is now ready to use.  
 Consult the instruction manual for advanced features and functions.