



# BIG BUTTON CORDED PHONE WITH SOS

STAY IN TOUCH

## GETTING STARTED GUIDE

### 1. UNPACK

Unpack the Cocoon Big Button Corded Phone with SOS and confirm you have all the parts:

- 1 X Base Unit
- 1 X Handset
- 1 X SOS Remote
- 1 X Telephone Line Cable
- 3 X AAA Activ Energy Batteries
- 1 X A23 Battery
- Instruction Manual
- Warranty Card



### 2. CONNECT HANDSET

Attach the coiled cord from the handset to the bottom of the base unit.



### 3. CONNECT TELEPHONE LINE

Plug in the telephone line cable to the side of the base unit.

*NOTE: An ADSL filter is highly recommended if you have an ADSL internet connection*



### 4. CONNECT TO WALL OUTLET

Take the other end of the telephone line cable and plug it in to your active wall outlet.

*NOTE: You may need an adaptor if you have an older style outlet*



### 5. INSERT BATTERIES

On the bottom of the base unit, remove the battery cover and insert the included AAA batteries taking note of polarity.

### 6. USE

Pick up the handset, and dial the number that you wish to call.