



COCOON™ AMP TV Getting Started Guide

1. UNPACK


Unpack the Cocoon AMP TV from the packaging and check you have all the components:

- 1 X Cocoon AMP TV
- 1 X Power Adaptor
- 1 X HDMI Cable
- 1 X Remote Control
- 2 X Activ Energy AAA Batteries
- 1 X Manual
- 1 X Getting Started Guide
- 1 X Warranty Card



2. CONNECT TO YOUR TV

Using the supplied HDMI cable, connect the Cocoon Android Media Player to your TV. Connect the HDMI cable to the port marked 'HDMI' on the rear of the AMP TV and then to an HDMI input on your TV. Ensure your TV is set to display the correct HDMI input, for example HDMI1.

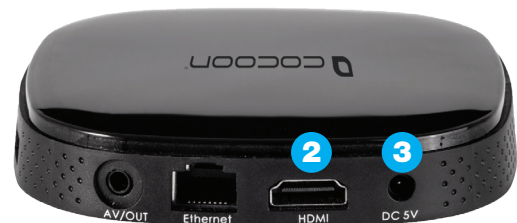

3. CONNECT TO POWER

Connect the power adaptor to a power outlet then connect the cord to the rear of the AMP TV in the port marked 'DC 5V'. Turn on the power at the wall. Once connected, the AMP TV will automatically begin booting up (ensure your TV is turned on).

4. REMOTE CONTROL

Insert the included Activ Energy batteries into the remote control by removing the battery cover on the rear of the remote. Insert the batteries, taking note of the polarity markings.

5. CONNECT A USB DRIVE OR MICRO SD CARD


Connect a USB memory stick with your movie file that you wish to play to either of the ports marked 'USB'. You can also insert a MicroSD card into the slot marked 'Micro SD'.



COCOON™ AMP TV Getting Started Guide

6. HOME SCREEN

Navigate to the Kodi Video Player by selecting VIDEOS from the home screen. You can navigate using the directional buttons on the remote control and select the VIDEOS option by pressing OK, then select “Files” to see all of your videos.

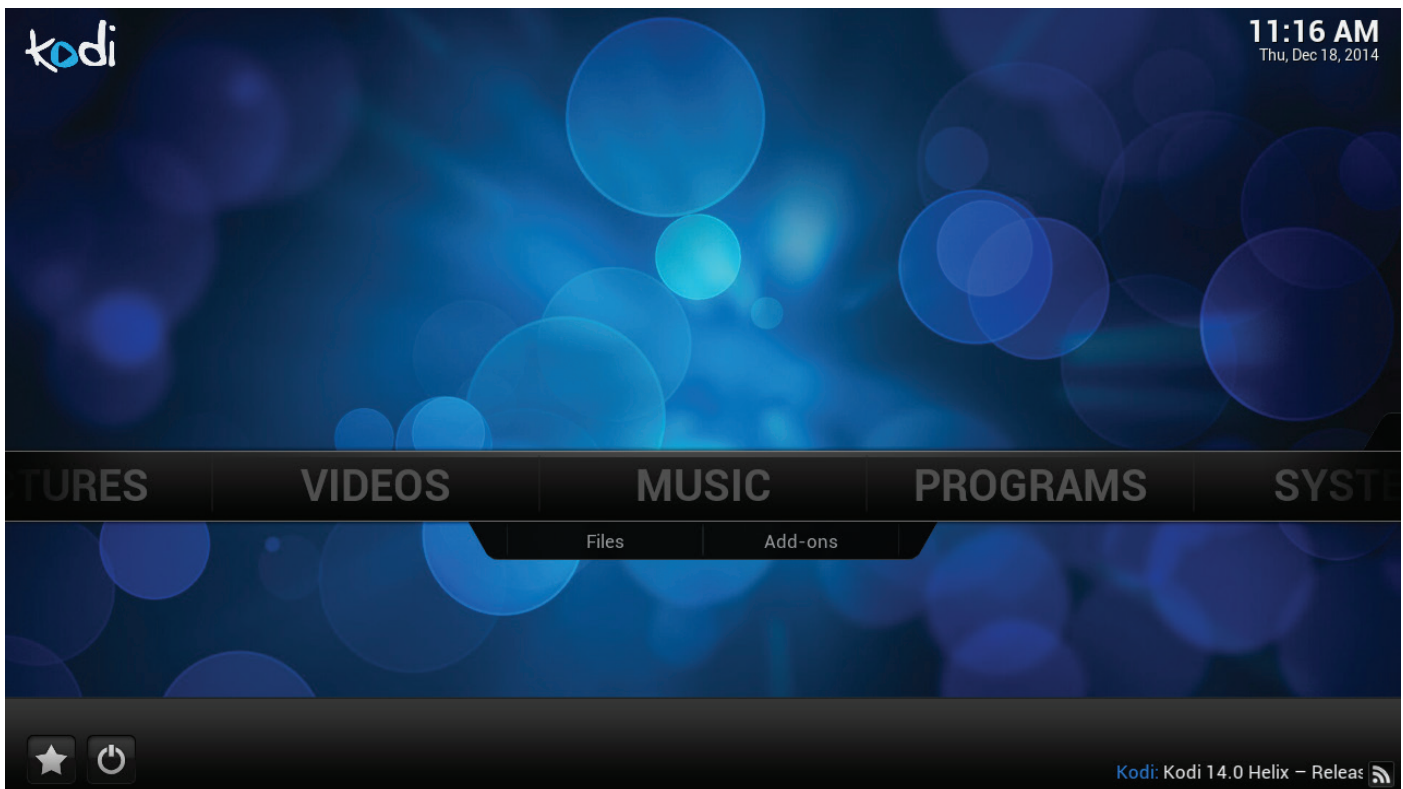

7. SELECT USB PLAYBACK

Use the remote to navigate to the movie file you wish to play. Once you highlight the file, press ‘OK’ on the remote to begin playback.

8. SUCCESS

You have successfully set up your AMP TV. For further information refer to the included user manual or visit www.winplus.com.au/AMPTV for advanced guides and information.