



6-ZONE WIRELESS ALARM KIT

PROTECT YOUR HOME OR BUSINESS



Getting Started Guide

1. UNPACK

Unpack the Cocoon 6-Zone Wireless Alarm Kit from the packaging and check you have all the components:

- 1 X Control Panel
- 4 X Door/Window Sensors
- 2 X PIR Sensors
- 2 X Key Ring Remotes
- 1 X Getting Started Guide
- 1 X Instruction Manual
- 1 X Warranty Card
- 2 X Mounting Accessories
- 6 x Screws & Screw Anchor Sets
- 2 x CR2032 Batteries
- 3 X AA Batteries
- 6 X AAA Batteries
- 16 X LR44 Batteries

In control panel, sensors, and remote



2. CHECK BATTERIES

Open the battery compartments on the Control Panel, PIR Sensors and Door & Window sensors and remove the plastic tabs, activating the batteries.

Before permanently mounting the units, make sure to test all components are powered.

Note: Each of the sensors will have a sticker with a number on it. These numbers correspond to a number on the Control Panel, so you can easily identify which sensor has activated.

3. MOUNT CONTROL PANEL

Using the included mounting accessories, fix the Control Panel on a wall in a central location.



4. MOUNT PIR SENSORS

1. Choose a mounting location for the PIR sensors.
2. Using included mounting accessories, fix the PIR sensors in place.

Note: It is best to place the PIR sensors in a high position (at least 1.5m from the ground) in a high traffic area.






Getting Started Guide

5. MOUNT DOOR AND WINDOW SENSORS

1. Choose a mounting location for the Door & Window sensors.
2. Peel off the backing of the double sided tape, and fix the Door and Window sensors in place.
3. Set the switch under the battery cover to the "ON" position.

Note: It is best to place the Door & Window sensor unit on the door itself, and the magnetic strip on the door frame.

Note: Ensure the surface you are sticking to is clean and dry.

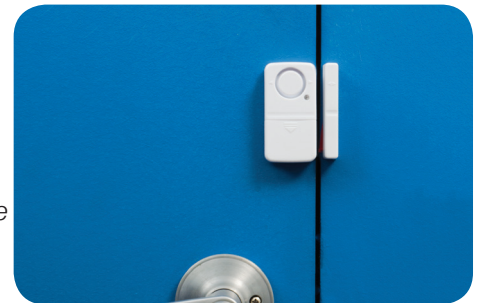


6. REMOTE CONTROL FUNCTIONS

1. Lock - This will enable the alarm, for use when you leave your home/office. There is a 10 second timer delay after the PIR sensors can be triggered.
2. Unlock - This will disarm the alarm.
3. Home - This will engage "Home" mode. In "Home" mode, the PIR Sensors will be deactivated, however the Door & Window Sensors will still function.
4. Emergency - Pressing this button will immediately set off the alarm.



7. CONTROL PANEL FUNCTIONS

1. Mode switch - This will change between the three alarm modes:
 - a. Chime - When the PIR sensors are activated, a chime will sound.
 - b. Off - The alarm unit will not be powered on at all.
 - c. Alarm - When armed, if any of the sensors are activated the alarm will sound for 30 seconds, if it is not disarmed beforehand.
2. Code - This is used to re-pair any sensors or pair new sensors.
3. USB Port - Additional to using the included batteries, you can power the Control Panel using a USB charger (Not included).

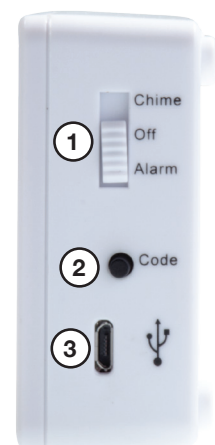

SIDE VIEW

**CONGRATULATIONS YOUR 6-ZONE WIRELESS ALARM KIT IS NOW READY TO USE.
CONSULT THE INSTRUCTION MANUAL FOR ADVANCED FEATURES AND FUNCTIONS.**