

COCOON  
KIDS CREATE  
EDUCATE  
PLAY

# Karaoke Machine



Model Number: HE214002

**INSTRUCTION MANUAL**





## Warranty Details & Support

This product is warranted against defects for a period of One year. If the product is faulty, Winplus will repair or replace the product (at its discretion) at no cost to you provided the Cocoon Kids Karaoke Machine has been used in accordance with instructions provided. The benefits under our Warranty are in addition to other rights and remedies under consumer law in relation to these goods. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For additional support including helpful guides and videos, visit the Cocoon support website at [www.winplus.com.au/cocoon.html](http://www.winplus.com.au/cocoon.html)

**Telephone:** 1300 663 907  
**Email:** [customercare@winplus.com.au](mailto:customercare@winplus.com.au)  
**Website:** [www.winplus.com.au](http://www.winplus.com.au)  
**Address:** Winplus Australasia Pty Ltd, PO Box 537  
Bayswater Business Centre Vic 3153



# Contents

Support/ Warranty Details.....	2
Contents.....	3
Introduction/ Parts List / Technical Specifications.....	4
Product Overview.....	5
Powering the Cocoon Kids Karaoke Machine.....	6
Connecting a Microphone.....	6
Inserting a CD or CD-G.....	6
Play/Pause.....	7
Stop.....	7
Program.....	7
Repeat.....	7
Echo.....	7
Audio Playback Functions.....	8
Master Volume.....	8
Auto Voice Control.....	8
Balance.....	8
Connecting an MP3 Player.....	9
Disco Lights.....	9
Connecting to your TV.....	9
Inserting Batteries.....	10
Frequently Asked Questions.....	11
Repair and Refurbished Goods or Parts Notice.....	15

**After Sales Support**

Telephone: 1300 663 907  
Internet: [www.winplus.com.au](http://www.winplus.com.au)



## Introduction

Congratulations on the purchase of your Cocoon Kids Karaoke Machine. This product is designed to Playback CD, CD-G, Aux input and provide many years of reliable use. Please read and follow these instructions carefully. If you experience any difficulties setting up or using this product, please see inside cover for contact details.

## Parts List

- 1 x Karaoke Machine
- 1 x Microphone
- 1 x RCA Cable
- 1 x Power Adaptor
- 1 x Instruction Manual
- 1 x Getting Started Guide
- 1 x Warranty Card
- 2 x Warranty Stickers

 
## Technical Specifications

Output Power:	2 x 1W
Output Impedance:	8Ω
Frequency Response:	100 Hz – 20KHz
Signal to Noise Ratio:	50 dB (A-WTD)
Aux In:	3.5mm headphone jack
Microphone:	Ø6.3mm dynamic microphone with -74 Db 600Ω impedance
Power Input:	DC 9V 0.8A
Battery Input:	8 x “C” Cell batteries (not included)
Weight:	1.2kg
Dimensions:	23 x 10.5 x 25cm




# Product Overview

## FRONT

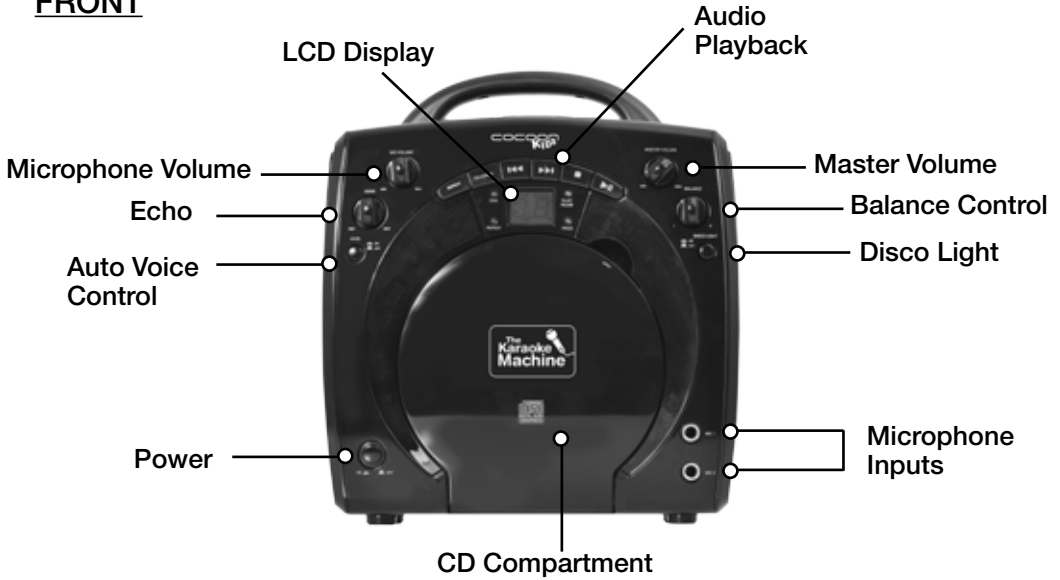

## BACK

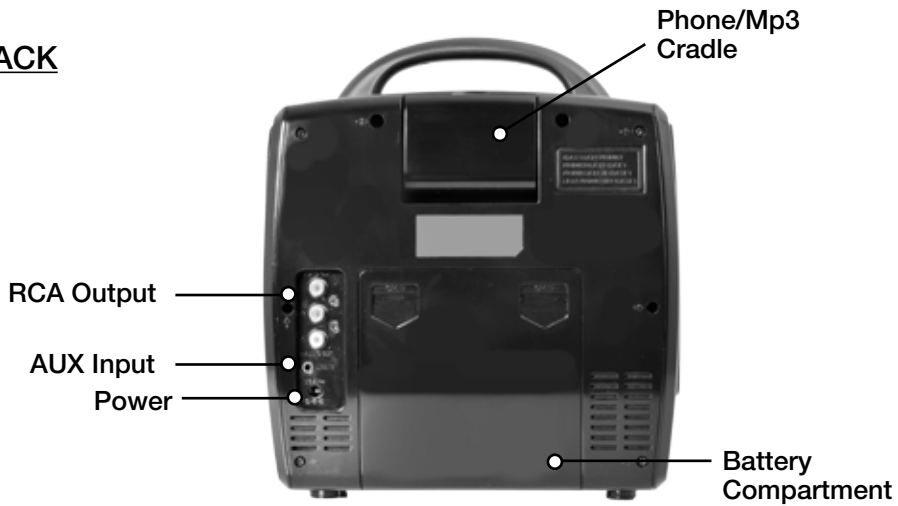 



## POWERING THE COCOON KIDS KARAOKE MACHINE

The Cocoon Kids Karaoke Machine can be powered directly using the included power adaptor or using batteries. (Refer to p. 10 for instructions regarding batteries)

1. Connect the plug of the power adaptor to the rear of the Cocoon Kids Karaoke Machine
2. Connect the power adaptor to mains power.
3. Switch on the power outlet.
4. Press the ON/OFF button located on the bottom left side of the front of the unit.

## CONNECTING A MICROPHONE

The Cocoon Kids Karaoke Machine can support up to 2 wired microphones using a ¼" plug. There is 1 wired microphone included with the Cocoon Kids Karaoke Machine to get you started.

1. Connect the ¼" plug of the microphone to either the Mic 1 or Mic 2 ports located on the bottom right side of the unit.
2. Switch the microphone to ON using the switch located on the microphone handle.
3. Adjust the microphone volume using the MIC VOLUME dial located on the top left side of the unit.
4. Adjust the master volume using the MASTER VOLUME dial located on the top right side of the unit.

## INSERTING A CD OR CD-G

A karaoke CDG or CD-G is the main type of format for the CD's used for karaoke with CD-G being the most common label. CD-G stands for compact disc plus graphics, a special disc format where simple graphics and text are stored in the sub channels of the audio disc. You can playback your favorite CD's using the Cocoon Kids Karaoke Machine or insert CD-G's into the unit to read lyrics when connected to a TV. (Refer to p. 9 for further information)

1. Open the CD door by inserting your finger near the OPEN label on the cd door. Pull down gently to open the door.
2. Load your CD into the compartment and gently close the CD door.
3. The LED display on your Cocoon Kids Karaoke Machine will show the number of tracks that are available on the CD to play.
4. When you insert a CD-G, the CDG LED will be lit.

**Note:** Only 1 CD can be inserted at a time.

**Warning:** Never insert anything except for a CD or CD-G onto the disc tray. Foreign objects can damage the unit.





### Play/Pause

Push to toggle Play and Pause functions while a CD is inserted. The PLAY/PAUSE LED will light up when paused

### Stop

Push to stop playback. The LED display will light up with the total number of tracks on the CD

### Skip Forward




Push to skip to the next track on the disc or the next track in the program order

### Skip Back

Push once to return to the beginning of the currently playing track, or press twice to skip to the beginning of the previous track

### Program

You can program the Cocoon Kids Karaoke Machine to play songs in a pre-selected order.

1. If the CD is currently playing, press the STOP button to begin programming.
2. Press and hold the PROGRAM button until the "PROG" LED is begins flashing.
3. The LED display will flash 
4. Press the SKIP button  to select the desired track number.
5. Press the PROGRAM button to confirm the track selection.
6. The LED display will show the next program position number. For example, if you have just selected the 3rd track in your program, then the LED will display "4". This indicates that the track being selected currently will play 4th in the program.
7. You can repeat the above steps to add up to 20 tracks to your list.
8. When you have selected all the tracks you wish to play, press the PLAY button  to start singing.

**Tip: To clear all the programmed tracks, press the STOP button twice, and the "PROG" LED will stop flashing.**

### Repeat

To repeat the track currently playing:

1. While a track is playing, press the REPEAT button once.
2. The REPEAT LED will flash.
3. Press the PLAY/PAUSE button to begin playing.
4. To stop the repeat function press the repeat button until the repeat light turns off.

#### After Sales Support

Telephone: 1300 663 907  
Internet: [www.winplus.com.au](http://www.winplus.com.au)



To repeat all tracks on the CD:

1. Press the REPEAT button twice.
2. The REPEAT LED will stay lit.
3. Press the PLAY/PAUSE button to begin playing.
4. To stop the repeat function press the repeat button until the repeat light turns off.

## AUDIO PLAYBACK FUNCTIONS

### Master Volume

Use the MASTER VOLUME dial to control the overall volume of the unit. This will affect both the microphone output volume and the CD playback volume.

### Auto Voice Control

This function allows you to replace the lead singer's voice with your own when playing a multiplex recording.

1. Press the A.V.C button to turn the Auto Voice Control function ON/OFF
2. The vocals on the multiplex recording will be muted when using the microphone.
3. When the microphone is not in use, the pre-recorded vocals will resume.

**Note: this function will only work for multiplex recordings on CDs. These are generally CD-Gs and will be labeled as such.**

### Balance

When playing a multiplex CD-G

1. Turning the dial to the right will lower the volume of the music track.
2. Turning the dial to the left will lower the volume lead singers vocals.

When playing an audio CD

1. Turning the dial to the right will shift volume output to the right speaker
2. Turning the dial to the left will shift volume output to the left speaker.

### Echo

Use the echo dial to enhance your voice to give a concert hall effect.





## CONNECTING A PORTABLE AUDIO DEVICE (MOBILE PHONE, MP3 PLAYER, TABLET)

You can connect your MP3 player or other audio device using a 3.5mm audio cable (not included) and sing-a-long to your favourite tracks that might not be on CD.

1. Connect the audio device via a 3.5mm audio cable to the LINE IN port located on the rear of the unit.
2. Ensure the volume of your audio device is turned up.
3. Control track playback from the MP3 player or audio device.

**Tip: There is a cradle compartment which opens from the rear of the Cocoon Kids Karaoke Machine. Use this cradle to hold your audio device while it is connected to the Cocoon Kids Karaoke Machine.**

**Note: You cannot control (Play/Pause/Stop/Skip Tracks) from the Cocoon Kids Karaoke Machine when connecting an Mp3 player.**

## DISCO LIGHTS

The Cocoon Kids Karaoke Player comes with Disco lights that will flash while you sing.

1. Press the Disco Light ON/OFF button to turn the lights on
2. Press the button again to switch the lights off.

## CONNECTING TO YOUR TV

The Cocoon Kids Karaoke Machine can be connected to your TV when playing a CD-G format discs, to allow you read the lyrics as you sing to the audio track.

1. Using the included RCA cables, connect the yellow plug to the VIDEO OUT jack and the white and red to the AUDIO OUT jacks using their respective colours.
2. Connect the opposite ends of the RCA cable to their respective VIDEO IN and AUDIO IN jacks on your TV. (Refer to your TV manual)
3. Turn your TV to the correct AV channel.
4. Insert a CD-G disc featuring lyric tracks and when you begin music playback the lyrics will be displayed in time with the audio track.

**Note: Lyrics will only be displayed when using a valid CD-G. Regular format audio CD's do not have this feature.**

### After Sales Support

Telephone: 1300 663 907  
Internet: [www.winplus.com.au](http://www.winplus.com.au)



COCOON<sup>™</sup>  
KIDS

## INSERTING BATTERIES

You can insert 8 x C batteries (not included) to your Cocoon Kids Karaoke Machine and take your music with you.

1. Slide the battery door in the direction shown on the battery panel.
2. Insert 8 x C batteries (not included) as indicated taking note of the polarity of the batteries when inserting them.
3. Replace the cover tightly before you operate the unit.

**Tip: When replacing old batteries, it is best to replace all 8 batteries at the same time. You should not mix old batteries with new batteries.**



## Troubleshooting

PROBLEM	SOLUTION
No power when ON	<ul style="list-style-type: none"><li>- Check the power plug is connected to the back of the unit and then plug into a power outlet</li><li>- Check that the outlet is switched on</li><li>- Check that the ON/OFF button on the bottom-left of the unit is in the ON position</li></ul>
No power when using batteries	<ul style="list-style-type: none"><li>- Change the batteries</li><li>- Check the batteries are inserted correctly</li><li>- Ensure the power cable is not connected at the same time as the batteries</li></ul>
No sound	<ul style="list-style-type: none"><li>- Turn up the master volume dial</li><li>- Remove any aux-in cables that may be connected to the AUX-IN port</li><li>- Check volume of any connected audio device</li><li>- If playing from an external audio device, ensure the volume is turned up</li></ul>
CD Player does not work	<ul style="list-style-type: none"><li>- Check your disc is not scratched or dirty</li><li>- Check the CD lens is clean. If dusty, blow clean air across the lens to remove the dust. If problems persist, use a CD lens cleaner to clean the CD compartment</li><li>- Check there is no moisture inside of the unit. Allow to dry before use.</li><li>- Disconnect the unit from batteries and power completely for 30 secs and retry</li></ul>
No sound when connected to TV	<ul style="list-style-type: none"><li>- Ensure component or AV is selected as the source for your TV audio</li><li>- Ensure the colour coded RCA cables are correctly inserted into their respective jacks</li><li>- Turn up the volume of the TV or home theatre</li></ul>
Lyrics do not appear on screen	<ul style="list-style-type: none"><li>- Ensure the colour coded RCA cables are correctly inserted into their respective jacks</li><li>- Ensure you are playing a CD-G. Audio CD's will not display lyrics</li><li>- Ensure the CD-G LED is lit to confirm a CD-G format disc is playing.</li></ul>

**After Sales Support**

Telephone:

1300 663 907

Internet:

[www.winplus.com.au](http://www.winplus.com.au)



## Troubleshooting

PROBLEM	SOLUTION
No sound from microphone	<ul style="list-style-type: none"><li>- Turn up the volume on the MIC VOL and master volume dial</li><li>- Ensure the microphone is switched to the ON position on the microphone handle</li><li>- Ensure you are singing into the microphone and are not more than 3cm away from the microphone</li><li>- Ensure the microphone jack is securely connected to either MIC 1 or MIC 2</li></ul>
Music or vocals cut out while playing a CD-G and singing with the microphone.	<ul style="list-style-type: none"><li>- Switch off Auto Voice Control</li><li>- Ensure you are playing a track that has avocal track</li></ul>
No sound or low volume from the microphone	<ul style="list-style-type: none"><li>- Check the echo dial is not too low</li></ul>
While playing a CD-G track with music and vocals, only music or vocals play.	<ul style="list-style-type: none"><li>- Adjust the balance dial to the middle</li></ul>
Burned CDs will not play	<ul style="list-style-type: none"><li>- Ensure the burned CD is a CD-R or CD-RW disc. Discs must be burned as audio CD format, not MP3 CD format.</li></ul>
What format discs are compatible?	<ul style="list-style-type: none"><li>- Formats supported are: CD, CD-G, CD-R (burned as an audio CD), and CD-RW (burned as an audio CD)</li></ul> <p><b>Note: CD-R and CD-RW burned as MP3 discs are not supported</b></p>





# Notes:

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---





COCOON™  
KIDS™



## Kids Karaoke Machine

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

WINPLUS AUSTRALASIA  
PO BOX 537  
BAYSWATER BUSINESS CENTRE VIC 3153

WINPLUS HELP DESK: 1300 663 907  
EMAIL: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)

**After Sales Support**

Telephone: 1300 663 907  
Internet: [www.winplus.com.au](http://www.winplus.com.au)

