



MY FIRST TABLET GETTING STARTED GUIDE

1 UNPACK FROM THE BOX
Power on by pressing the ON button.
Press the light button to turn on the light.



2 LETTER MODE
Choose letter mode to hear the letter when you press each button.



3 SPELL MODE
Choose spell mode to hear the spelling of each word when you press each button.



4 WORD MODE
Choose word mode to hear the word of each letter when you press the button.




5 QUIZ MODE
Choose quiz mode to be asked to find a letter or word.





MY FIRST TABLET GETTING STARTED GUIDE

6 ABC SONG
Press the  icon to sing-a-long to the ABC's!



7 VOLUME
You can alter the volume by using the volume buttons as shown.



8 POWER OFF
When you're done playing, press the power button again to turn off the device.



CHANGING BATTERIES

My First Tablet comes with 3 x AA Activ Energy batteries.

To replace the batteries, simply unscrew the battery cover on the rear of the unit using a Phillips head screwdriver.

Remove the battery cover and replace the batteries, taking note of the polarity markings.

When the batteries are in place, reattach the battery compartment and ensure the screw is securely fastened.



Warning: Do not let children play with the battery cover or screw as these can present a choking hazard.

Years 3+

