



DIGITAL NOTETAKER

COMPACT AUDIO RECORDER



GETTING STARTED GUIDE

1

REMOVE BACK COVER

Remove the battery cover on the rear of the product, by sliding downwards



2

INSERT BATTERIES

Insert the supplied 2 x AAA batteries according to the marked polarity. Replace the battery cover



3

POWER ON

Hold down the PLAY button for 2 seconds to power the unit on



4

RECORDING

Press the REC button once. The record icon **REC** will be shown on the LCD display





DIGITAL NOTETAKER

COMPACT AUDIO RECORDER



GETTING STARTED GUIDE

5 **END RECORDING**
Press the STOP button to end the recording



6 **PLAYBACK**
To playback your recording, press the FILE/ERASE button and select the F1 folder by pressing the PLAY button. Select the file you wish to play back using the << or >> buttons. Press the PLAY button to playback your recorded file



7 **TURN OFF**
Turn off the device by holding down the PLAY button for 2 seconds

