



7" COLOUR eBook READER & Media Player



INSTRUCTION MANUAL

Model Number: BK7021



N14410



7" Colour eBook Reader & Media Player

WARRANTY DETAILS

This product is warranted against defects for a period of One year. If the product is faulty, Winplus will repair or replace the product (at its discretion) at no cost to you provided the product has been used in accordance with instructions provided. You are responsible for any expenses associated with making a claim under this warranty (incl. postage). The benefits under our Warranty are in addition to other rights and remedies under consumer law in relation to these goods. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Winplus Australasia Pty Ltd
PO Box 537
Bayswater Business Centre Vic 3153



After Sales Support

Telephone: 1300 663 907
Internet: www.winplus.com.au

Welcome

Congratulations on choosing to buy a COCOON™ product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufacturers. All products brought to you by COCOON™ are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. **Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.**

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures.
- Do not remove the cover or the back of this product. There are no user-serviceable parts inside this product.
- Do not repair the unit yourself. Only have it serviced by qualified personnel.
- Supervise young children to ensure they do not play with the product.
- Do not expose the product to dripping or splashing liquids.
- Do not place the product near other items that may damage it, such as naked flame sources (lit candles) or objects containing water.
- Avoid banging objects against or dropping the eBook Reader
- Do not place or use near magnets
- Avoid using in dusty or extremely humid conditions
- Do not expose to direct sunlight for long periods of time

 
Contents

Warranty Details	i
Welcome	1
General Safety Instructions	1
7" Colour eBook Reader & Media Player Product Features	3
Parts List	4
Technical Specifications	4
Instructions	3-16
1 - Getting Started	5
2 - Inserting a Memory Card	5
3 - Tips & Tricks	6
4 - Option Menu	7
5 - Importing & Transferring Content	7
6 - Transferring DRM eBooks to Reader	9
7- Reading eBooks	10-16
8 - Viewing Pictures	16
9 - File Explorer	17
10 - Settings	18
Troubleshooting	19
Support	21

After Sales Support

Telephone: 1300 663 907
 Internet: www.winplus.com.au

7" Colour eBook Reader & Media Player

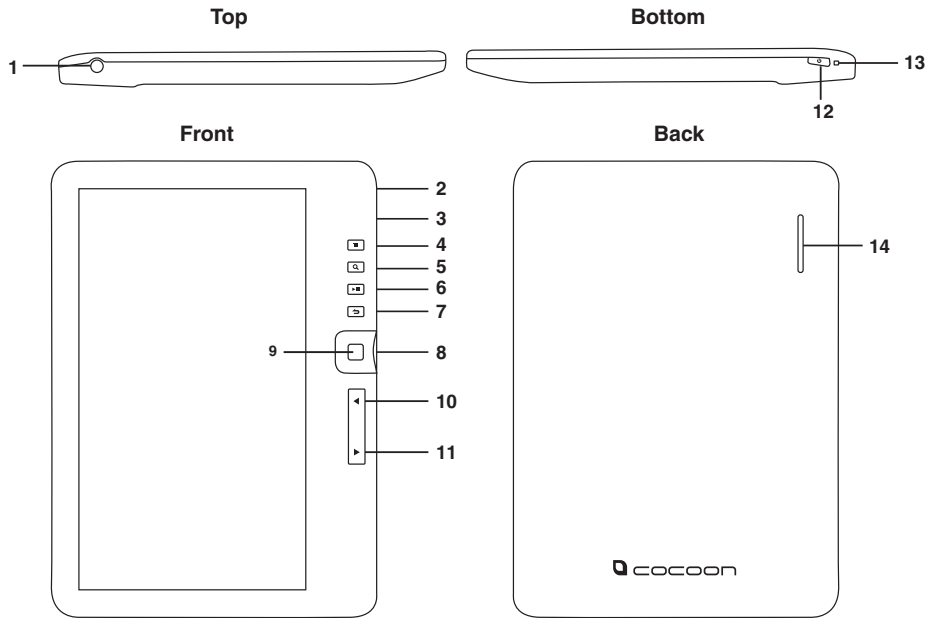

1. **Earphone jack**
2. **Mini USB jack** – for data transfer
3. **MicroSD slot** – supports MicroSD up to 32GB (FAT32 + NTFS formats)
4. **Menu button** – press to display Option Menu
5. **Zoom button** – press to adjust font size or to zoom in/out
6. **Play/Pause button** – to enter into music menu
7. **Return button** – press once to return to previous menu, press and hold to return to Home Menu
8. **Directional buttons** – to move cursor
9. **OK/Enter button** – accepts current selection
10. **Previous page button** – press to turn to previous page
11. **Next page button** – press to turn to next page
12. **Power button** – press and hold for 3 second to turn on/off
13. **Charging indicator** – red while charging, blue when fully charged
14. **Speaker**

Parts List

- 1 x 7" Colour eBook Reader & Media Player
- 1 x Protective Case
- 1 x USB Cable
- 1 x Earphones
- 1 x Instruction Manual
- 1 x Setup Guide
- 1 x Warranty Card
- 2 x Warranty Stickers

Technical Specifications

Display

7 inch TFT-LCD Display
800x480 pixels

Storage memory

Built in memory: 4GB
Supports TF card up to 32GB (FAT & NTFS format)

Media File Format supported

eBook: EPUB, PDF, TXT, FB2, PDB, HTML, RTF
Audio: MP3, WMA, AAC, WAV, OGG
Photo: JPG, BMP, GIF, PNG
Video: MPEG1, MPEG2, MPEG4(Xvid), DIVX, H.263, H.264, RM / RMVB, MKV, MOV, VOB, FLV.

Connectivity

Data transfer: USB 2.0 High Speed
Audio: 3.5mm audio jack
Power: USB jack

Miscellaneous

Built in stereo speaker
Clock / Date
Real time battery indication
G-Sensor

Battery life

Reading – up to 8 hours
Music – up to 40 hours (with backlight off)
eBook + Music - up to 7 hours

Charging

Power: DC 5.0V
Duration: 6 hours (approx)

Minimum system requirement (USB Mass Storage)

Windows 98, 2K, XP, Vista, Win 7, Mac OS 10x, Linux

Physical properties

Dimension: 187.4 x 128.5 x 11.8 mm
Weight: 280g

After Sales Support

Telephone: 1300 663 907
Internet: www.winplus.com.au

1. GETTING STARTED

Power the eBook Reader On and Off

- Press and hold the power button for 3 seconds to turn on. This is located on the bottom of the unit
- It may take a few moments for the eBook Reader to turn on and load the content
- If the eBook Reader does not turn on then charging may be required
- To turn the eBook Reader off, press and hold the power button for 3 seconds

Charging the eBook Reader

Note: You will need to charge your eBook Reader for at least 6 hours before first use

- Connect the eBook Reader to a spare port on your PC using the included USB cable to begin charging. **(Note: your PC must be turned on)**
- While charging, the eBook Reader will enter standby mode if it is idle for 60 seconds. You can press the power button to wake up the reader
- The battery status is displayed at the bottom left corner of the screen. The remaining battery time is shown next to the battery icon



 
2. INSERTING A MEMORY CARD

The eBook Reader supports MicroSD cards in both FAT32 and NTFS format

Note: NTFS format is needed to copy files larger than 4GB to the MicroSD card

To insert a MicroSD card:

- Check that the MicroSD card is in the correct position with the copper contacts facing upwards as shown. You may damage the MicroSD and the eBook Reader if the card is not inserted correctly

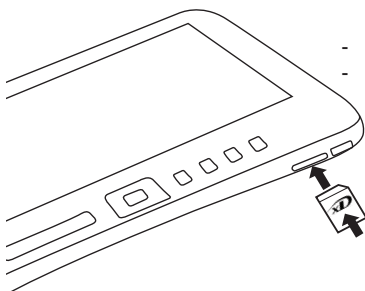


- Push the MicroSD card into the card slot until it clicks
- To remove the MicroSD card, push the card in slightly until it clicks and pops out

3. TIPS & TRICKS

- When a MicroSD card is inserted it may take a few seconds for the eBook Reader to update the content
- Avoid inserting or ejecting a MicroSD card when the eBook Reader is in use. This may freeze the system or cause it to reset
- When the MicroSD card is in NTFS format; you cannot directly copy files from the eBook Reader internal memory to the MicroSD card

Home Menu

 Screen Display

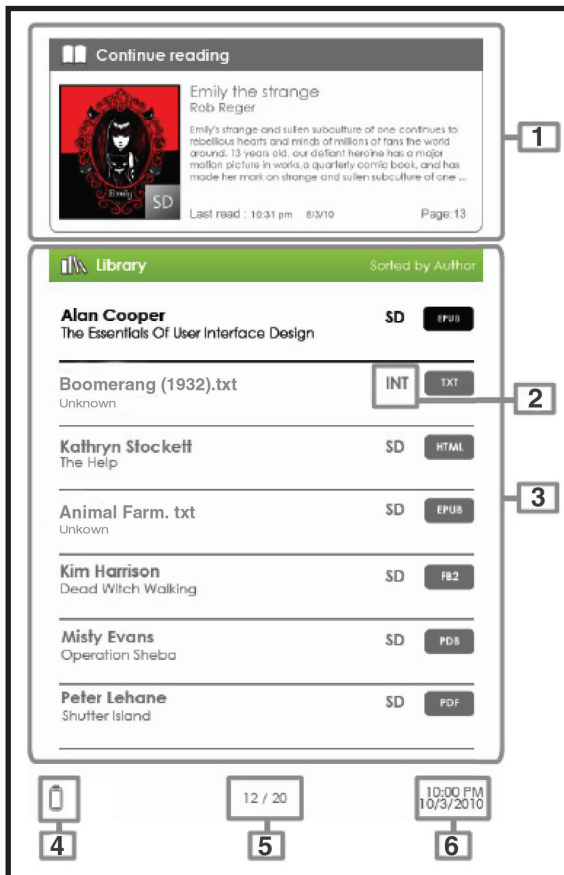

1. Continue Reading

Displays the last read book. Press OK to continue reading from where you left off

2. File Directory

Indicates the location where the file is stored. SD – SD card, INT – internal memory

3. Library

Displays the list of books available. Move the cursor to desired book and press the OK button to open it

4. Battery Indicator

Displays how much battery is left




5. Page Number


 




 
 

 
Displays current page number and total available pages in the eBook library

6. Time & Date

Display current time and date. This can be set in the settings menu see page 18 for details

4. OPTION MENU

- To access extra features and functions that are available, press the Menu button  to display the Option Menu
- You can use the directional buttons to move the cursor to your selection. The currently selected item will be highlighted in darker text. Press the OK button to confirm your choice
- To exit the Option Menu, move the cursor to the  option and press OK to confirm
- You can also exit the Option Menu by pressing the Menu button 

	To sort books by different categories: Title, Author, Category, Date, Format
	Jump to a specific page
	Read from previously added bookmarks
	Adjust brightness of the display screen
	Enter into Video Player
	Enter into Music Player
	Enter into Photo Viewer
	Enter into File Explorer for advanced file management options
	Enter into System settings
	Open your favourite book list

5. IMPORTING & TRANSFERRING CONTENT

Transferring Files

1. To transfer files to and from your eBook Reader; connect the eBook Reader to your PC via the included USB cable
2. Once connected, the eBook Reader will enter USB mode. It will display "USB Connected" when successfully installed
3. You can access the files on the eBook Reader by going to My Computer and double clicking on BK7021 in your removal device list
4. You can now copy and paste eBook, music, video and picture files

Importing DRM Content

The 7" COCOON™ eBook Reader & Media Player supports Adobe DRM content. You will need to have Adobe Digital Editions (ADE) installed on your PC to use these files

 
Installing ADE

The 7" COCOON™ eBook Reader & Media Player comes preloaded with the installation files required for ADE to be installed on your PC


1. Connect the eBook Reader to PC via the supplied USB cable and open the eBook Reader as a removable disk. Go to My Computer and double click on the eBook removal device
2. Make sure your computer is connected to internet
3. For Windows users double click on the **ADE_2.0_Installer.exe** file to open the installer

Note: For Mac users or for the latest Windows version of ADE, you can download the installer from <http://www.adobe.com/au/products/digital-editions/download.html>

For first time users, you will need to get a free Adobe ID from the Adobe website
Click on the get an Adobe ID online link as illustrated:

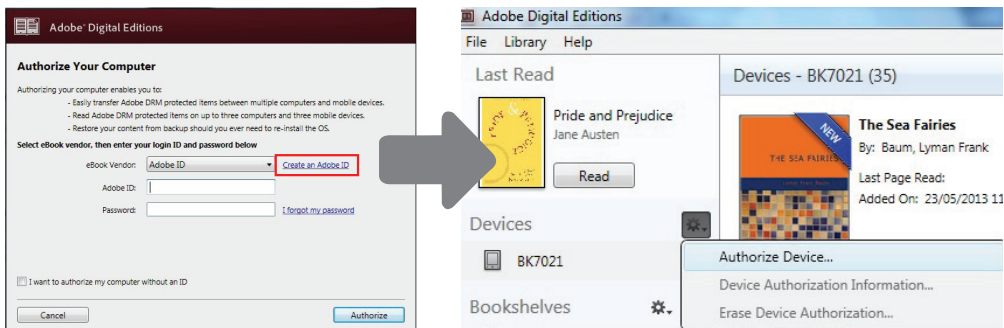


Authorising your PC and eBook Reader

- Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account
- After activation, connect the eBook Reader to your PC via the included cable. Click on the Device Options icon  and select "Authorize Device" to allow your eBook Reader to work with ADE.
- After authorization, you will be able to find the eBook Reader recognized in ADE as below. Contents inside the eBook Reader will be displayed on the right hand window

After Sales Support

 
Telephone: 1300 663 907
Internet: www.winplus.com.au

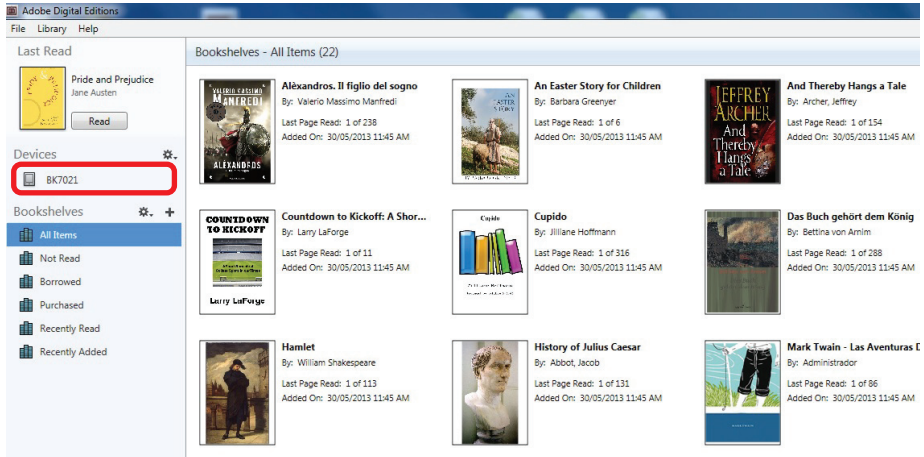

- You can now start downloading or buying eBooks from online eBook stores supporting Adobe DRM. Websites that support Adobe DRM include GooglePlay and Kobo Books

6. TRANSFERRING DRM EBOOKS TO READER

 - From the ADE main screen, click on All Items in the left hand menu
- Items in the My Digital Editions folder will be listed in the main window
- Select the eBook(s) you would like to transfer. You can select multiple files by holding the Shift key and Left Clicking on the files you want
- Drag and drop the selected eBook(s) into the eBook Reader's drive located on the last row of the left side column as illustrated

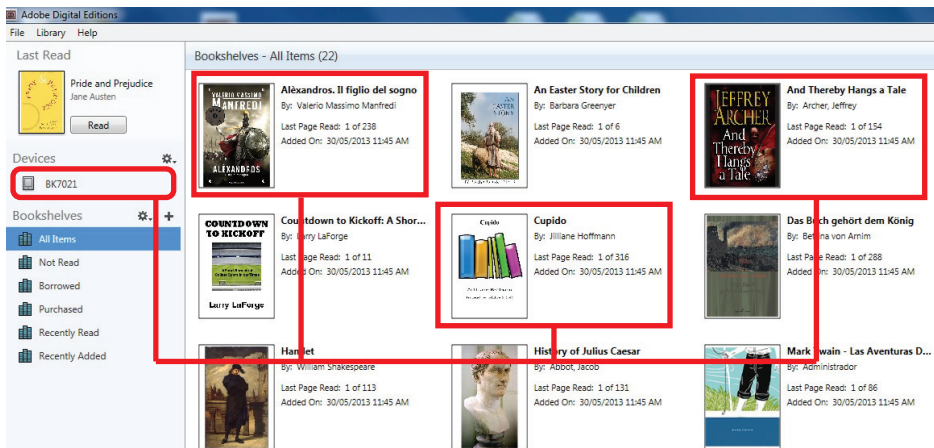


Note: Each Adobe ID only supports 6 devices. An eBook Reader with a MicroSD card inserted will count as 2 devices

7. READING EBOOKS

Opening eBooks


- Books transferred to the eBook Reader will listed on the Home Menu
- The eBook Reader supports eBooks in the following formats:
EPUB, PDF, TXT, FB2, PDB, HTML
- You can use the directional buttons to move the cursor to select which eBook to read. Your selection will be highlighted, you can press the OK button to open the file

 Book Interface

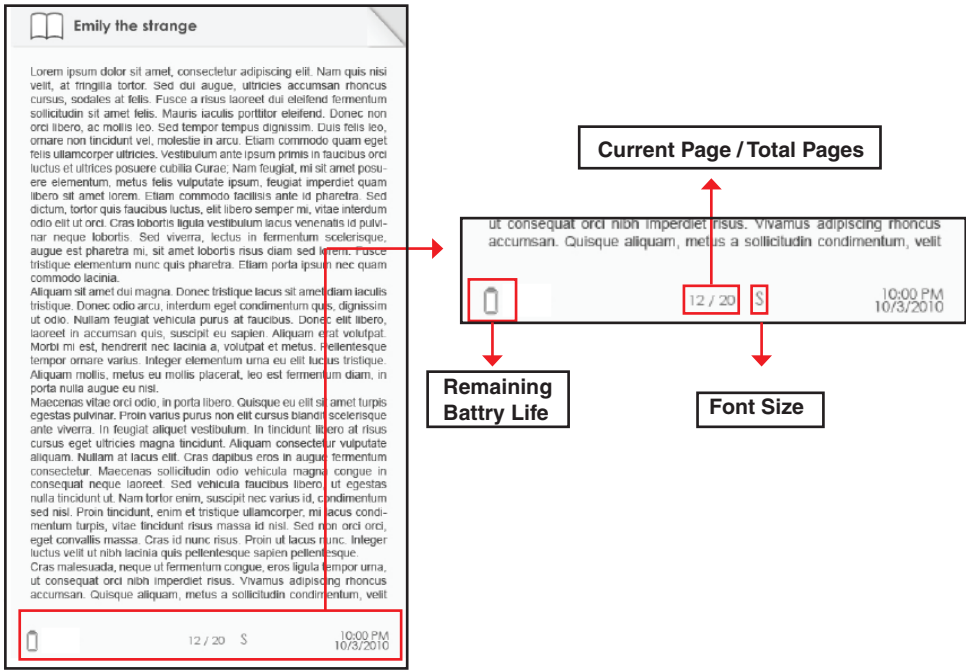


When reading an eBook you can use either the Left/Right arrow buttons or the direction buttons to turn the pages

Adjusting Font Size


You can adjust the font size while reading an eBook by pressing the zoom button  to enter the font size menu

 - There are 5 font sizes available: Small, Medium, Large, X-Large and XX-Large
- Move your cursor using the directional button to the desired font size then press OK to confirm
- It may take a few seconds for the fonts to be resized

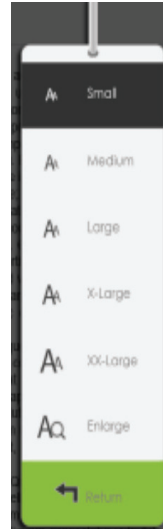

Zooming In/Out

You will need to use the zoom function to enlarge images on the eBook. This includes all ePub and PDF files

- Press the zoom button  to enter the font size menu
- Move your cursor using the directional button to 'Enlarge' then press OK to confirm
- The zoom menu will appear and you can select your desired zoom level. Press OK to confirm

 


Note: Page turning is disabled in zoom mode. You can press the Return button  to exit zoom mode and return to the original size

Option Menu




While reading an eBook you can press the menu button  to enter the Option Menu

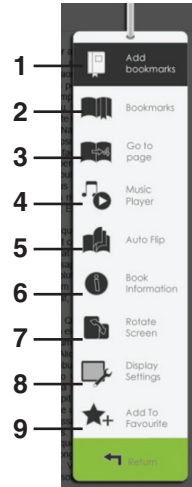1. Add Bookmark
2. Bookmark
3. Go to Page
4. Music Player
5. Autoflip
6. Book Information
7. Rotate Screen
8. Display Settings
9. Add to Favourites




Creating and Loading Bookmarks

 
To easily access the last page you were reading, you can create a bookmark to save your place

- Enter the option menu by pressing the the Menu  button, move the cursor to Add Bookmark and press OK to confirm
- To delete a bookmark you have created, press the Menu  button, then move the cursor to Bookmarks, highlight the Bookmark you wish to delete, press the Menu icon  again, select delete and press OK to confirm
- From the Bookmarks menu, move your cursor to Delete Bookmark, press OK to confirm

Go To Page


You can jump to pages using the Go To Page function

- Enter the option menu by pressing the the Menu  button, move the cursor to Go to Page and press OK to confirm
- You can then use the directional buttons to move the cursor left and right to move between numbers and the Up/Down buttons to change the page number
- Move to the cursor to Apply then press OK to confirm

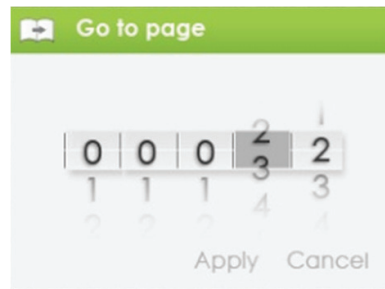


Auto Flip

You can set the eBook Reader to automatically turn pages after a defined period of time

- Enter the option menu by pressing the the Menu  button, move the cursor to Auto Flip and press OK to confirm
- You can choose to have the pages automatically turn at 10s, 20s, 30s, 40, 50s and 1min intervals

Book Information


You can check the information of the current book from the Book Information option. This will show: Title, Author, Publisher, File Type, Date added, File size, Publisher and Expiration

 
- Enter the option menu by pressing the menu  button, move the cursor to Book Information and press OK to confirm

The information provided will depend on the source of the eBook, some of the information may not be available

Auto-Rotate


The COCOON™ 7" Colour eBook Reader & Media Player comes with a built in G-Sensor that will rotate your books when the eBook Reader is turned to 90°. This will rotate the images or eBooks to landscape orientation for easier viewing

Note: In landscape view, the Option Menu is divided into 2 pages. To access options in the second page, move the cursor to the  at the top right corner of the Option Menu and then press OK button to see the rest of the options

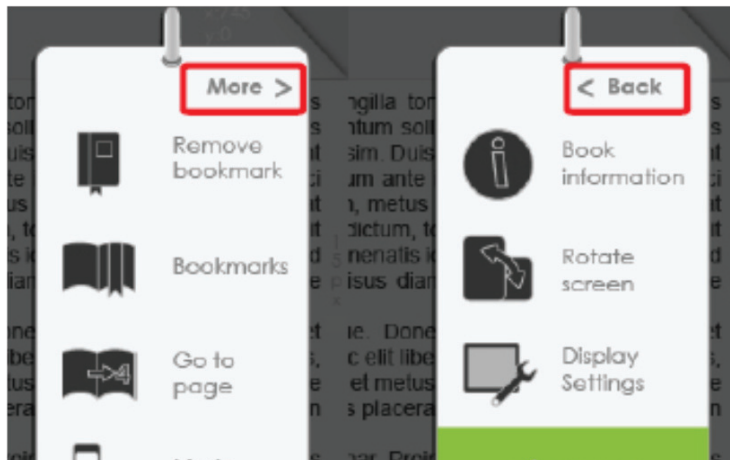

Display Settings



Change the font colour, background colour and brightness during reading from the Display Settings menu

- Enter the option menu by pressing the the Menu  button, move the cursor to Display Settings and press OK to confirm



Note: Change of font colour and background colour are only applicable to txt and ePub files

Favourites

Add books to your favourite list for quick access


- Enter the option menu by pressing the the Menu  button, move the cursor to Add to Favorite and press OK to add the current book to the favourite list.
- Access the favourite list from the Home Menu. Press the Menu  button and select Favourite

To remove book from Favourites:

 
- From the Home Menu, open the Favourite List. Move the cursor to the desired book title Press Menu  button and select Delete from the dropdown list pressing OK to confirm your selection
- While reading a book, press the Menu button  and select Remove from Favorite from the Option Menu

Background Music

Play music in the background while you read books


- To control music playback while you are reading a book, press the Play/Pause button to bring up the mini music player
- You can navigate the music controls with the directional buttons
- Pressing the Return button  will resume normal book reading functions

Music Status Bar

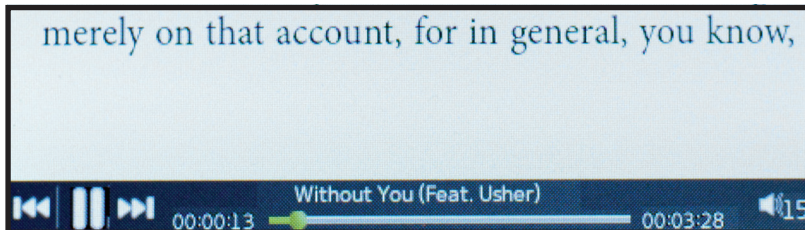


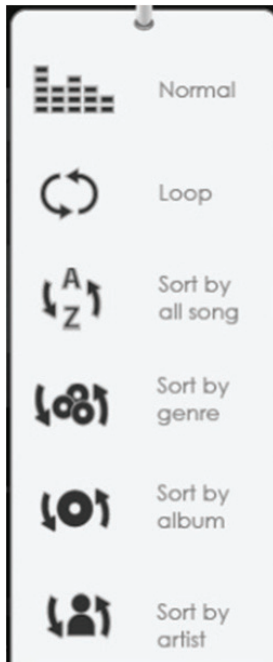 
Playing Audio Files

You can access the Music Player to play music files stored on the eBook Reader or MicroSD card

From the Home Menu, press the Menu Button  to display the Option Menu
Move the cursor to Music and press OK to confirm

To play or pause the music	Press OK
To play the next song	Press direction button right, press and hold to fast forward
To play previous song	Press direction button left, press and hold to fast rewind
To Increase volume	Press direction button up
To decrease volume	Press direction button down

You can adjust additional options by pressing the Menu Button  to display the Option Menu



EQ settings – move the cursor to EQ Settings, press the directional button left or right to select desired EQ setting

Play Mode - move the cursor to Play Mode] press the directional button left or right to select desired Play Mode

To view all stored audio files


To sort audio files by genre

To sort audio files by album

To sort audio files by artist

Playing Video Files


You can access the Video Player to play music files stored on the eBook Reader or MicroSD card

- From the Home Menu, press the Menu Button  to display the Option Menu
- Move the cursor to Video and press OK to confirm
- In the video library, move the cursor to the video file you wish to play and press OK to begin the video

Controlling video playback

Enter / Exit Full Screen	Press Zoom button
Increase/Decrease Volume	Press Directional button Left/Right
Previous Video / Fast Rewind	Press direction button down
Next Video / Fast Forward	Press direction button up
Play / Pause a video	Press Play/Pause button

 Adjust additional options by pressing the Menu Button  to display the Option Menu

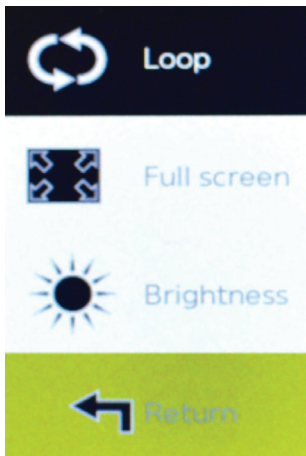

Play Mode - move the cursor to Play Mode press the directional button left or right to select desired Play Mode

Fit to Screen – move the cursor to Fit to Screen and press OK to enter full screen mode

Brightness – move the cursor to Brightness and press OK to adjust video brightness settings


To Display Subtitle during Video Playback

The eBook Reader supports subtitle of sub, ssa, srt and lrc format



Note: The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback

8. VIEWING PICTURES




You can access the Picture Viewer to view image files stored on the eBook Reader or MicroSD card.

- From the Home Menu, press the Menu Button  to display the Option Menu.
- Move the cursor to Photo and press OK to confirm
- In the image library, move the cursor to the image file and press the OK button to view the image in full screen
- Use the directional buttons to navigate through the files and folders from full screen mode

Zooming In/Out

- There are 3 zoom levels available in the image viewer. To zoom in, while in full screen mode, press the Zoom  to change the zoom level
- Return to original size by pressing the Return  button

Slideshow

- To begin slideshow playback of image files, while in full screen mode, press the Menu  button and select Slideshow, press OK to begin
- To stop the slideshow, press the Menu  button again
- Adjust the time interval between slides by pressing the Menu  button and selecting Slide Time

Thumbnail View





- To view image thumbnails, while in full screen mode, press the Menu  button and select Thumbnail, press OK to Confirm
- Exit thumbnail view by pressing Menu  button to return to full screen mode



Image Tips and Tricks

It is recommended that you organise your pictures into specific folder to make navigating the files easier

9. FILE EXPLORER


- From the Home Menu, press the Menu Button  to display the Option Menu. Move the cursor to Explorer and press OK to enter Explorer Mode. You will now see the File List of your eBook Reader internal memory
- Use the directional Left/Right buttons to select either the Internal or MicroSD memory, press OK to confirm your selection
- Pressing the Return  button will exit the directory you are currently in and return the cursor to Memory Selection

Copy / Paste files

- Copy files/folders from SD card to internal memory and vice versa
- From the file list, move the cursor to the file you wish to copy. Press the Menu  button and select Copy. Press OK to confirm
- From Explorer, go to the desired location to store the copied file. Press the Menu  button and select Paste to start copying the file into the new directory/folder. Press OK to confirm

Note: It may take longer time to paste files/folder with larger file size

Deleting File

From explorer, move the cursor to desired file to delete. Press the Menu  button and select Delete to start deleting file. Press OK to confirm

Note: It may take longer to delete files with large file sizes or quantities

10. SETTINGS

Adjust system settings from the Settings menu. This can be accessed from the Home Menu, moving the cursor to Settings and pressing OK

Time & Date

To set the time and date

- Press Directional Left/Right buttons to move the cursor
- Press Directional Up/Down buttons to input value

Note: Correct Time Zone setting is required to calculate the correct duration for book borrowing/returning if applicable

Device Standby

- To enable /disable auto standby mode
- Press the Power button to manually set the reader to standby mode
- Press the Power button once to wake up the reader from standby mode

Format Memory

Format the internal memory and MicroSD card of the eBook Reader using this function

Warning: Performing this function will remove all data from the device. This data will be lost. Please backup your data before performing this function

About Product

Displays product information of the Reader

Power Management

Displays real time battery status of the Reader

Restore Factory Defaults

Reset the eBook Reader settings to default. All DRM content and activations will be deleted. You are required to authorize the reader again through ADE after the system restored

Language

To set system language of the reader

Screen Rotation

To set screen rotation mode to auto or manual mode

User's Manual

This manual is also available on the device for easy access

After Sales Support

Telephone: 1300 663 907
Internet: www.winplus.com.au

TROUBLESHOOTING

If the reader does not function as expected, please try the following steps:

<p>The Reader is not responding or can't be turned on</p>	<ul style="list-style-type: none"> - Reset the reader by pressing and holding the power button for 6 seconds. The reader will be forced shutdown if it is on and you are required to turn the reader on again - Battery has been fully depleted. Please charge the reader before use
<p>Battery Life seems short</p>	<ul style="list-style-type: none"> - The battery was not used for a prolonged period. Please recharge the battery of the reader again - The battery is not fully charged. Please charge the reader for at least 4 hours
<p>A Book cannot be read</p>	<ul style="list-style-type: none"> - Copyright protected books cannot be read on any device other than authorised devices. - If you have borrowed the book from a library or online vendor. Check if the book loan period has expired - Check if the book format is supported by the reader. The eBook Reader supports the following formats: EPUB, PDF, TXT, FB2, PDB, HTML
<p>The reader cannot be operated during USB connection</p>	<ul style="list-style-type: none"> - The reader cannot be operated while it is connected to a PC. - Eject the reader from computer to resume operation - To use the reader while charging, click on the Safely Remove Hardware icon located on the right lower corner to disconnect data connection with computer - After the reader is safely removed, computer will only charge the reader and you can now resume normal operation



NOTES:





7" Colour eBook Reader & Media Player

SUPPORT

For additional support including helpful guides and videos, visit the Cocoon support website at www.winplus.com.au/cocoon.html

Telephone: 1300 663 907
Email: customercare@winplus.com.au
Website: www.winplus.com.au





 cocoon™

