


# COCOON™ FPV HD CAMERA DRONE


# REMOTE CONTROL REFERENCE

Winplus Australasia does not take any responsibility for the loss of the Cocoon FPV HD Camera Drone and it is NOT covered by warranty. We recommend that users test their drone in a safe indoor environment before attempting to fly the drone outdoors.

We highly recommend that you read the instruction manual in full before attempting to operate and fly the drone.

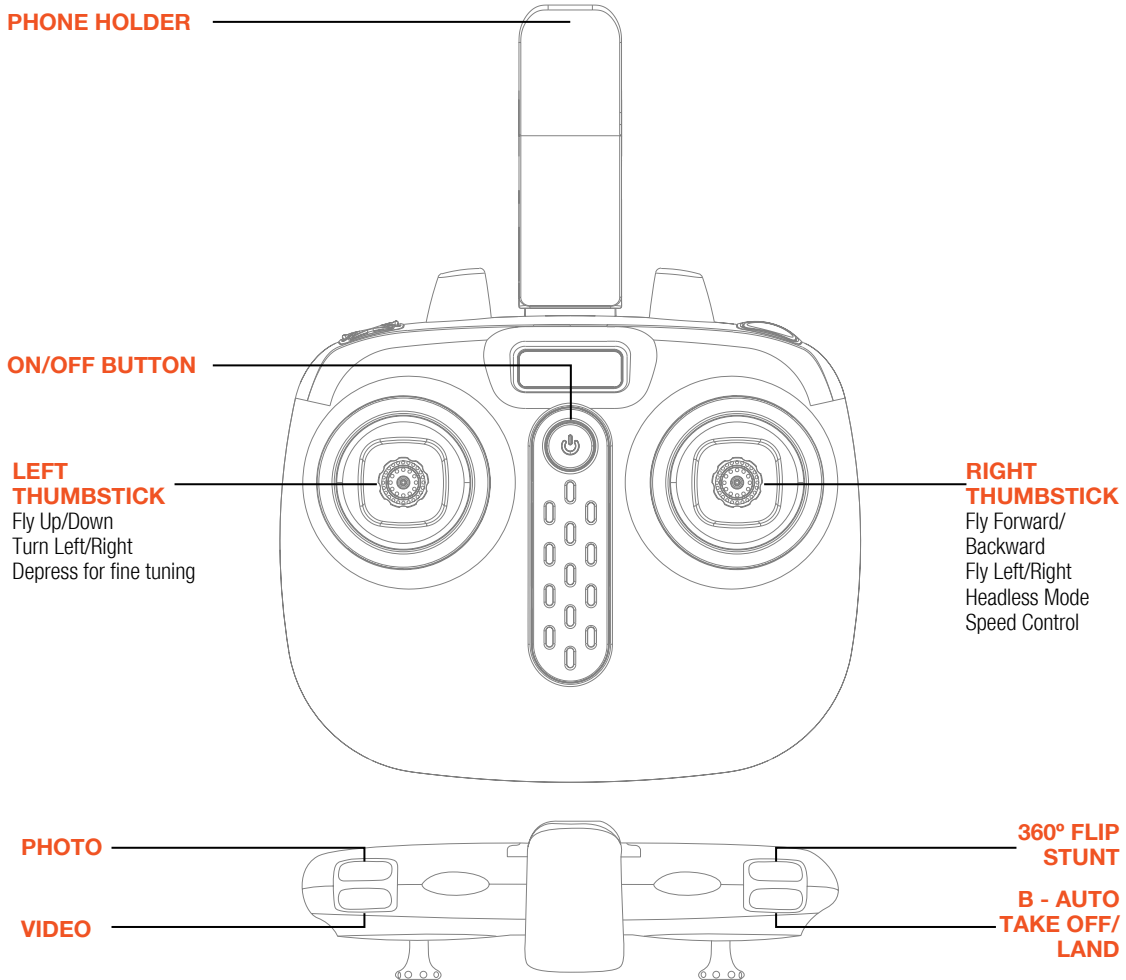


## ENGAGE PROPELLERS

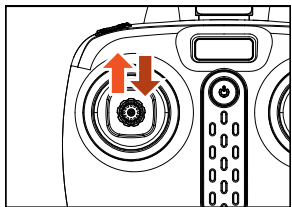


Push the left thumb stick up to the highest point and then allow the thumb stick to reset to the centre

## SWITCH OFF PROPELLERS

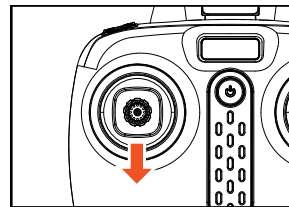


Push the left thumb stick down to the lowest level and hold for approximately 5 seconds until the drone has landed and powered down

## FLIGHT

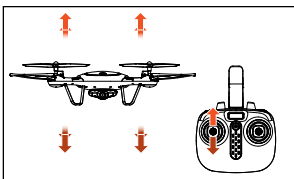


### Up & Down

Push the left thumb stick up or down to move the drone upwards or downwards

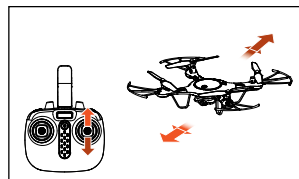


### Forward & Backward

Push the right thumb stick up or down to move the drone forwards or backwards.

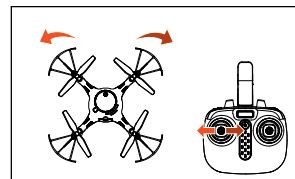

### Turn Left & Right

Pull the left thumb stick left or right to turn the drone left or right.

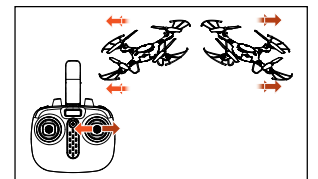

### Fly Sideways

Pull the right thumb stick left or right to move the drone to the left or right.

