1. BEFORE YOU START 0 0 Scan this code or search for Cocoon Connect Before you begin, you'll need the following:

1. A mobile device - Android (V4.1 or later) or iOS (V8 or later)

2. USB Power going to the Pet Feeder

4. Download the Cocoon Connect app

3. A WiFi connection (have the password handy)

- 1. Slide the bowl into the feeder's outlet
- 3. Pour food into the unit. The red LED will stop flashing

First time users:

Register an account and follow the remaining prompts on screen

Register by email

3. APP SETUP

Wi-Fi indicator LED will be flashing white

Press Manual Feed Button for 5 seconds if the Wi-Fi indicator LED isn't flashing. Refer to your instruction manual if you are having issues putting the Pet Feeder into pairing mode

4. BEGIN PAIRING MODE

INDICATOR

LED LIGHT

3. FILL UNIT WITH FOOD 4. CLOSE THE LID 2 RELEASE BUTTON **AUTO FEED/ RESET BUTTON** 1 MOUNT THE BOWL

2. MOUNT BOWL & FILL

Û

2. Press the release button to lift up the lid

when hopper is full

4. Press down to close the lid

5. ADD THE PET FEEDER

6. CONNECT PET FEEDER TO WI-FI

7. SCAN OR CODE WITH CAMERA

8. CONTROL YOUR PET FEEDER







1. Confirm your local Wi-Fi password

If you have any trouble with this step, ensure that your Wi-Fi password is correct. If you still have trouble with this step, please check the Instruction Manual



- 1. Hold the mobile phone 15 to 20cm in front of the Pet Feeder for
- the camera to scan the QR code. **2.** Pet Feeder will beep when the code is scanned



Use the Cocoon Connect app's intuitive control to view the Pet Feeder's camera, take snap shots and activate the feeder's pet food hopper