BLUETOOTH SPEAKER

SAFETY AND **SPECS**

SAFFTY AND CARE **INSTRUCTIONS:**

Read this manual carefully before putting the appliance into operation and keep this manual for future reference

- · Parents need to make sure that children follow below safety instructions when using this product
- . Keep the device away from heat, direct sunlight and sharp edges
- . Keep the device away from naked flames.
- . Do not insert any metal object into the device. Risk of short circuit!
- . To avoid a static charge, do not use the device in an extremely dry climate
- . Do not repair the unit yourself. Contact an authorised specialist
- . If the device is exposed to sudden changes in temperature, for example when taken from the cold into a warm room, wait at least two hours before using it
- . Only use the device in a moderate climate
- . Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, dry cloth
- · Rechargeable battery is only to be charged under adult supervision

- . The charging port terminals are not to be short-circuited
- . CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type
- . WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the
- Attention should be drawn to environmental. aspects of battery disposal
- . The product is water-resistant only when the seal cover is in place

IN THE BOX

- 1 x Bluetooth Speaker 1 x USB charging cable
- 1 x Quick Setup Guide



SPECS

Battery capacity: 300mAh Output power: 40 3W

Transmission distance: ≤10 meters Charging method: Micro USB 5V

Innut: DC 5V 500mA

Charging time: 1-2 hours depending on input power

Operating time: Approx. 3-4 hours at 70% volume plaving.

IP Rating: IPX7*

*IPX7 means protection against the effects of immersion in water between 15cm and 1m for 30 minutes. The product is water-resistant only when the seal cover is in place

BLUETOOTH SPEAKER

QUICK **SETUP GUIDE**

PRODUCT OVERVIEW









1. Carabiner

- . Convenient carry solution for fixing to backnack etc
- 2. + Volume Up / Next song . Short press for next song
- . Long press for volume up
- 3. Volume Down / Next song
- . Short press for previous song Long press for volume down
- 4. LED indicator built-in battery status
- Blue LED flashing Before pairing successfully

- . Slow Blue LED flashing Playing, pause and after pairing successfully · Red LED on - charging
- 5. Power switch On/Off

- Press for 3 seconds to power on/off . The unit will turn off automatically after 5 minutes if no audio devices are paired
- 6. Pause/Play button

· Press to pause, press again to play music under Bluetooth plaving mode

7. USB charging port

CHARGING THE SPEAKER

This Bluetooth Speaker is powered by a rechargeable lithium battery. Charge the hattery as follows:

- 1. Insert the charging cable into the Micro USB port on the Speaker, Connect the USB plug into a PC or 5V AC/DC adaptor (not provided). The LED indicator turns red when the battery is being charged.
- 2. When the battery has fully charged, the red LED indicator will turn off

Note:

- . To prolong battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions
- . Do not expose the Speaker to water while charging. It may result in permanent damage to the Speaker or power source

PAIRING SPEAKER

With the Sneaker turned off, activate the Bluetooth Speaker's pairing mode by pressing and holding the on/off button for approximately 3 seconds, or until the Blue LED light starts flashing

The Speaker is now ready for pairing. To pair the speaker to your mobile phone:

- 1. Turn on your mobile phone and activate the Bluetooth function
- 2. Search for Bluetooth devices and look for "HE180431" and pair with your device
- 3. When successfully paired the Blue LED light will flash slowly