

COCOON™

10,000mAh POWERBANK

SAFETY AND CARE INSTRUCTIONS

Read this Quick Setup Guide carefully before using this Powerbank and keep this Quick Setup Guide for future reference

- Children should be supervised to ensure they do not play with this appliance.
- Close supervision is necessary when any appliance is used by or near children
- Do not charge this Powerbank whilst in use
- Do not use this Powerbank for anything other than its intended use or purpose. Doing so may damage it and void warranty
- Handle with care. Avoid dropping this device, especially on a hard surface
- Do not crush, bend, deform, shred or submerge this device in liquid
- Do not squeeze or puncture the Powerbank to avoid electrolyte leakage of lithium-ion battery
- Only use the Powerbank in moderate climates
- Do not use a damaged cable or power charger to charge the Powerbank
- Never use the Powerbank if any part of it is damaged
- Do not attempt to open or disassemble this Powerbank

- Do not get the Powerbank wet or immerse it in water. If it has become wet, do not attempt to dry it with an appliance such as a hair dryer or in a microwave oven
- Do not wash the Powerbank with corrosive cleaner
- Do not use this Powerbank in areas where paint, petrol etc. is stored and there is a risk of exploration or fire from flammable gases
- To avoid a fire hazard, keep the Powerbank away from open fires, stoves or any other sources of high heat
- At the end of its working life, observe local regulations when disposing of this product
- Attention should be drawn to the environmental aspects of battery disposal
- The battery should be charged at least every three months to avoid shortening the battery life
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE

IN THE BOX

- 1 x 10,000mAh Powerbank
- 1 x Micro USB Charging Cable
- 1 x Quick Setup Guide
- 1 x Warranty Card


SPECS

Battery capacity: 10,000mAh
USB: 2 Outputs
Micro USB: 1 Input
Input: DC 5V=2A
Output: DC 5V=2A
Lights: LED Indicators
Finish: Rubberised

SAFETY AND SPECS

PRODUCT OVERVIEW

1. Power button
2. LED power indicators
3. Charging input
4. Charging output

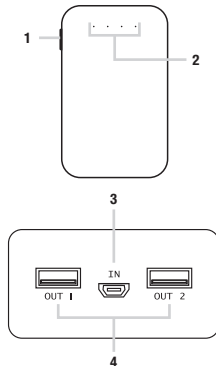

COCOON™


10,000mAh POWERBANK

QUICK SETUP GUIDE

GETTING STARTED


To turn on the Powerbank, short press the power button. To turn off the Powerbank, short press the power button twice. If left on, the Powerbank will automatically turn off after approx 30 seconds

Before first use, we recommend charging the Powerbank until 100% charged

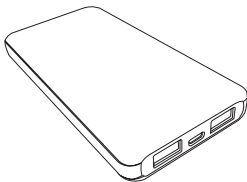

CHARGING THE POWERBANK

1. Plug the small connector of the supplied micro USB charging cable into the charging input port on the Powerbank
2. Plug the large connector into the USB port on a computer or a 5V USB adapter (not included) and plug into a wall socket
3. As the Powerbank charges, the LED power indicator on the front will blink, displaying the current charge level of the Powerbank

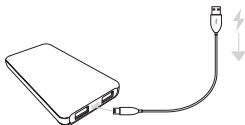

4. Once all 4 indicator lights have lit up on the Powerbank, it is fully charged. Remove the small connector of the charging cable from the input port and remove the large connector from the power supply that you are using.

Note:

- Remember to turn off the power supply before removing the charging cable.


Your Powerbank is ready to use

CHARGING A USB DEVICE


1. Plug the large connector of the supplied micro USB charging cable into either output port on the top of the Powerbank
2. Plug the small connector into the micro USB charging port on your device
3. The LED power indicator will light up, showing the charge level of the Powerbank

Note:

- Not all devices will use the same micro USB port for charging
- Please check your device to see if this cable is suitable. If not, you will need to use the charging cable that came with your device (not supplied)

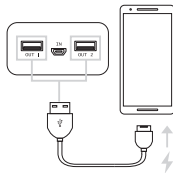

 4. As the Powerbank charges your device, the LED indicator will display the current level of the powerbank (4 LEDs lit up indicates the Powerbank still has 100% charge, 3 LEDs indicates 75% charge, 2 LEDs indicates 50% charge and 1 LED indicates 25% charge)



5. Once your device is charged remove charging cable from the charging port on your device
6. The Powerbank will hold its charge until you use it again