



cocoon

4K ACTION CAMERA


QUICK SETUP GUIDE

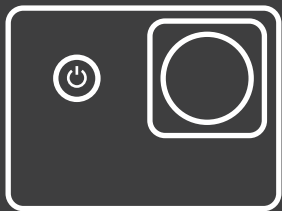

REMOVE CAMERA
FROM PACKAGING

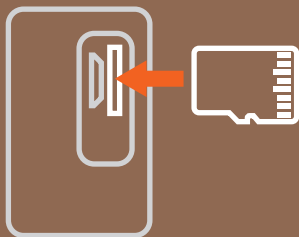

INSERT MICROSD CARD
(NOT INCLUDED)

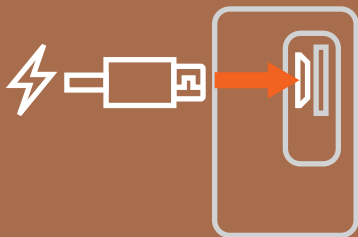

FULLY CHARGE USING
MICRO USB CABLE




ATTACH CAMERA TO
DESIRED MOUNT

FOR MORE DETAIL, PLEASE READ THE FULL MANUAL

COCOON

4K ACTION CAMERA

QUICK SETUP GUIDE

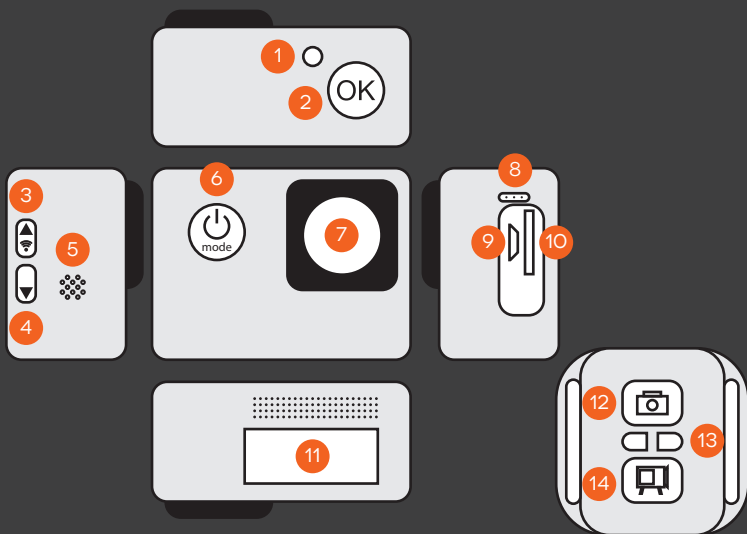

1. Wi-Fi indicator

Flashes yellow when the Wi-Fi mode is on. Solid when connected to a Wi-Fi device

2. OK / shutter button

Take a photo, start/stop video recording or confirm a selection

3. Up / Wi-Fi button

Move up in a menu

4. Down / microphone button

Move down in a menu

5. Speaker

6. Power / M Button
Turns the action camera on and off. Switches between modes of Camera & Video

7. Lens

8. Microphone

9. Micro USB port

10. microSD card slot*

11. Battery door

12. Capture button

Press to take a photo

13. LED indicator

Indicates that a button has been pressed

14. Video button

Press to start recording a video/stop recording

FOR MORE DETAIL, PLEASE READ THE FULL MANUAL