

# COCOON<sup>™</sup> MOTORCYCLE BLUETOOTH KIT



## Getting Started Guide

BT42740  
PLU: 10998  
08/2019



### 1. UNPACK

Unpack the Cocoon Motorcycle Bluetooth® Kit from the packaging.



### 2. CHARGE THE RECEIVER


Insert the USB charging cable into the charging port of the receiver. Minimum charging time is 4 hours.



### 3. CONNECT THE CLIP AND RECEIVER TO HELMET

Connect the clip to the left side of the helmet (when on your head) using the included clips and fasteners. Then slide the Bluetooth receiver onto the clip.

**WARNING:** Excessive tightening may damage the clips.

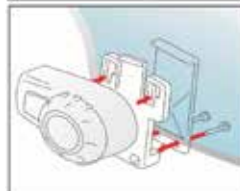

### 4. POSITION THE SPEAKERS & MICROPHONE

Using the supplied felted adhesive earphone pads, place the speakers and microphone headset in a suitable position.



### 5. CONNECT HEADSET TO RECEIVER

Connect the headset to the Bluetooth receiver. The plug can only be inserted one way.

**NOTE:** Inserting the plug backwards will cause damage to the Bluetooth receiver.



### 6. BLUETOOTH CONNECTION

Pair your Motorcycle Bluetooth Kit with your Bluetooth enabled phone.



## Warranty Note

**If you experience any issues with this product, or its performance is not what you had expected, please contact us at Winplus.**

**It is likely that we can resolve any problems for you via phone or email.**

**We can be reached on:**

**Phone: 1300 663 907 (8:30am - 6:00pm AEST)**

**Email: [customercare@winplus.com.au](mailto:customercare@winplus.com.au)**

**Web: [www.winplus.com.au](http://www.winplus.com.au)**